

HiPath 3000 V3.0 or later

Gigaset S1 professional in HiPath Cordless Office

Operating Manual

SIEMENS

Global network of innovation

Safety notes

Handset



Danger:

- Do not use the handset in potentially explosive atmospheres.
- Do not install the handset in the vicinity of electronic equipment to avoid mutual interference.
- Do not use the handset in wet rooms! Devices are not splashproof.
- A transmitter signal is emitted by your handset. Please observe safety procedures for your area.



Note:

- Information for hearing aid users: Radio signals can interfere in hearing aids.
- Please provide the operating instructions with the handset if giving it to another user.

Batteries



Danger:

- Only use permitted batteries.
- Do not use conventional batteries. Failure to observe this advice can lead to danger.
- Avoid contact with fire and water.
- Only use the approved C39280-Z4-C373 power supply unit to operate the charging shell.




Note:

Please dispose of the battery, the handset, the charging shell and the plug-in power supply unit in accordance with the environmental specifications.




Overview of handsets

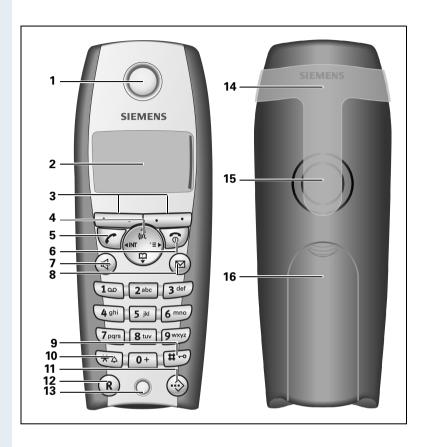

- 1 Receiver inset
- 2 Display
- 3 Display keys
- 4 Control key
- 5 Talk key
- 6 On-hook and on/off key
- 7 Speakerphone key
- 8 Message list

- 9 Hash key
- 10 Star key
- 11 Speed dialling key
- 12 R key
- 13 Microphone
- 14 Attachment clip
- 15 Ringer loudspeaker
- 16 Battery compartment cover

How to use the keys: → page 10

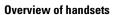

Contents

Conducting calls – the basic functions Activating/deactivating the handset. First seize the line, then dial Dial first, then seize the line Manual number redial Callback Enquiry. Answering a call Placing a call in a call pickup group Ending a call. Call forwarding. Activating or deactivating the keypad lock Leaving the radio network Description of the keys Function keys R key Control key Display keys 1 Putting the handset into service Inserting the batteries Charging and using the batteries Charging and charging times of the batteries Fitting the attachment clip Setting the system display language 1 Setting the handset volume Setting the handset volume Setting the handset volume Setting the handset volume Setting the ringer Advisory tones. Setting the ringer Advisory tones. Setting the ringer echo	Overview of handsets	.
Activating/deactivating the handset. First seize the line, then dial Dial first, then seize the line Manual number redial Callback Enquiry. Answering a call Placing a call in a call pickup group Ending a call. Call forwarding. Activating or deactivating the keypad lock Leaving the radio network Description of the keys. Function keys R key. Control key Display keys. 1 Putting the handset into service Inserting the batteries Charging and charging times of the batteries Incharging and charging times of the batteries Fitting the attachment clip Setting the handset display language Setting the handset volume Setting the handset volume Setting the handset volume Setting the ringer Setting the ringer Advisory tones Setting the ringer echo	Operating instructions	.1
First seize the line, then dial Dial first, then seize the line Manual number redial Callback Enquiry. Answering a call Placing a call in a call pickup group Ending a call. Call forwarding. Activating or deactivating the keypad lock Leaving the radio network Description of the keys. Function keys R key. Control key Display keys. 1 Putting the handset into service Inserting the batteries Charging and charging times of the batteries Permitted batteries Fitting the attachment clip Setting the handset volume Setting the handset volume Setting the handset volume Setting the handset volume Setting the ringer echo	Conducting calls – the basic functions	.1
Function keys 1 R key 1 Control key 1 Display keys 1 Putting the handset into service 1 Removing the protective cover 1 Inserting the batteries 1 Charging and using the batteries 1 Charging and charging times of the batteries 1 Permitted batteries 1 Fitting the attachment clip 1 Setting the handset display language 1 Setting the system display language 1 Setting the handset 1 Setting the handset 1 Setting the handset 1 Setting the ringer 1 Advisory tones 2 Setting the ringer echo 2	Activating/deactivating the handset. First seize the line, then dial Dial first, then seize the line Manual number redial Callback Enquiry. Answering a call Placing a call in a call pickup group Ending a call. Call forwarding. Activating or deactivating the keypad lock	. 2 . 3 . 3 . 5 . 6 . 7 . 7
Removing the protective cover	Function keys	10 11 11
Setting the handset volume	Removing the protective cover Inserting the batteries Charging and using the batteries Operating and charging times of the batteries Permitted batteries Fitting the attachment clip. Setting the handset display language	13 14 15 15 16 16
	Setting the handset volume	18 18 20 21

Activating or deactivating the ringer	22
Activating or deactivating the warning tone	22
Activating/deactivating automatic call answering	23
Setting the date and time	23
Editing the idle display	24
Resetting the defaults	
·	
012	07
Conducting calls – enhanced functions	21
Speakerphone mode	27
Voice dialling	28
Number redial	30
System speed dialling	32
Individual system speed dialling	
System telephone directory	
Handset telephone directory/speed dialling list	
E-mail directory	
Directed assignment of an MSN (multiple subscriber number)	
Making calls using identification codes	
Using the handset as a second line	
Deactivating the phone number display	
Directed call transfer	
Activating/deactivating do not disturb	
Call charge display	
Call trace	
Entrance telephone	43
TDS telephone data service	
Activating control relays	
Sending a signal to the network	
External call forwarding with a multiple subscriber number	
Using night service	
Using dual-tone multifrequency signalling	49
Parking/activating calls	
Conduction calls with multiple wars	E4
Conducting calls – with multiple users	
Call waiting	51
Call waiting tone off/on	52
Disabling/enabling automatic call waiting	53
Override	53
Transferring calls	54
Placing a call on hold	56
Toggling	
Conducting a conference	
Using the second call function	

Group functions	. 61
Activating/deactivating group calls	
Ringing group on	
UCD (Universal Call Distribution)	
widap group (widitiple Line Application)	. 07
Message functions	. 70
Leaving a message/advisory message	
Sending/calling text messages	71
Answering a message or voice-mail message	
Caller list	. /5
Additional functions	. 77
Handset alarm clock function	. 77
Handset appointment reminder function	
System appointment function	
Selecting a base	
Ç	
Telephone blocking	. 84
Handset telephone lock	
Telephone lock code programming	
Locking/unlocking the handset	
Control total from the control of th	. 07
System functions	. 88
Calling functions via the menu	
Calling functions via codes	
Functions and codes	. 89
Appendix	. 92
Troubleshooting	
Cleaning the handset	. 93
Technical data	
Accessories	
Declaration of comormity	. 54
Index	. 95

Operating instructions

These operating instructions describe your handset and its functions on your communications system.

All functions that can be performed via your handset are described here. If some of the required functions are not available on your handset, it may be due to one of the following:

- The function is not configured for you or your handset - please contact your system administrator.
- Your communications platform does not feature this function - please contact your Siemens contract partner to upgrade.

Conducting calls – the basic functions

You can use your handset to make both internal and external calls.

Internal calls are calls that

- you make within the range of a communication system, e. g. within your company,
- you make between networked communication systems, e. g. to different company locations.

External calls are calls that you conduct with users of the public telephone network.

Activating/deactivating the handset



Press the On-hook key until the activation or deactivation is confirmed by a crescendo tone sequence.



Note:

- The handset can only be fully switched off when removed from the charging shell.
- When the handset is placed in the charging shell it goes to idle status and shows the idle display.

If your preferred language for the display texts is not set, you can set this yourself (→ page 16).

Displaying the connection quality

The strength of the incoming signal is displayed by the "receive field strength" icon in on or message status:

D >>>	No receive field strength
▶ ⟩⟩⟩	Low receive field strength
>> >>	50% receive field strength
B >>>>	100% receive field strength

The radio range is different indoors and outdoors (→ page 93). Please consult your system administrator in the event of range problems.

First seize the line, then dial





or (4) Press the Talk or Speakerphone key.



Enter the required phone number. The user will be called.

Typing errors cannot be corrected. If you make a typing error: press the On-hook key.



The user answers. Conduct the call.

if necessary **IC**



Dial first, then seize the line

Enter the required phone no. and correct individual characters as necessary using the "Delete" Display key.

if necessary

The following functions are available while you are entering the phone number:

- "Insert Pause" (Insert a dial pause, e.g. between the prefix and phone number or when checking a mailhox.)
- "Insert TBR" (irrelevant)
- "Copy to Directory" (save the phone number in the handset's redial list)



Note:

This dialling preparation function is also available with number redial and dialling using the handset redial list





Press the Talk key or Speakerphone key within 30 seconds. The user will be called.




The user answers. Conduct the call.

Manual number redial

The last five phone numbers dialled are automatically saved in the redial list.



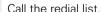



Press the top or bottom of the control key to select the required phone number.



Press the Talk key.

Callback

This function enables you to call a user who does not answer or whose line is busy. The Callback function enables you to contact him as soon as he hangs up or reuses his telephone. Please note that a line is signalled as busy when it is being called by another user. You can continue to use your handset without restriction when a callback has been booked.

You can also send a callback request as a message (→ page 71). This function can also be called by entering the code (\rightarrow page 88).

Booking a callback



The number is dialled. You hear the busy tone or the user does not answer.



Save the callback request.



Press the On-hook key to end the process.

You receive a Callback call

You will receive the callback, as soon as the user you want has hung up or the first time he uses his telephone. The following appears on your handset display "Callback:...".



Press the Talk kev. The connection is set up.



Note:

Callbacks are repeated until a connection is established or until the callback is deleted. A handset can initiate up to five callbacks and can be the destination for up to five callback requests. If these conditions are met, any further callbacks are rejected.

Deleting a callback request



Press the Talk key.

Menu

Call the system menu.



Service?

ΟK



More features?

OK

1 1

#58=View callbacks? oĸ

Select and confirm the menu item.

Mnu

Call the additional menu.

Delete?

OK

Select and confirm the menu item.

Select and confirm the menu item.

Select and confirm the menu item.



Press the On-hook key to end the process.

Enquiry

You interrupt your call to conduct an enquiry with a user (including external users) and then resume the original call.



You are on a call.



Activate enquiry. The current call is placed "on-hold", so that the first user waits.



Enter the phone number for the enquiry call.

The number is dialled. The user answers. The enquiry starts.

The enquiry is ended and you return to the call "on-hold"

either:

The second user hangs up. You are reconnected to the first user

or:

or: Option 1

Menu

Call the system menu.



Quit and return?

OK

Select and confirm the menu item.

Option 2



Press the R key.

You are reconnected to the first partner. The second partner hears the busy tone and hangs up; a Gigaset handset hangs up automatically.

However, you can also

- toggle between the partners (→ page 56),
- set up a conference (→ page 57) or
- transfer the waiting partner to the second partner (→ page 54).

The second user is busy or does not answer



Cancel the callback. You are reconnected to the first partner.

During the enquiry you can

- book a callback (→ page 3),
- activate call waiting (→ page 51) or
- override(→ page 53).

Answering a call

Your handset rings and/or vibrates (→ page 23). The caller information appears on the display. The name and/or telephone number of the caller can be displayed. The following options are available for answering a call:



The handset is in the charging shell: remove the handset from the charging shell (functions only if "Auto Answer" is active \rightarrow page 23).





The handset is not in the charging shell. Press the Talk key or Speakerphone key.

When you have answered the call you can

- transfer the call (\rightarrow page 54),
- place the call on hold and consult with someone else in the room (\rightarrow page 56),
- place the call on hold and call a second partner (\rightarrow) page 5) in order to forward (\rightarrow) page 54) or toggle the call (→ page 56) or to set up a conference (\rightarrow) page 57).

Rejecting a call

If you do not wish to be disturbed, you can reject the call.

Reject call

Confirm the message displayed with one of the two Display keys. The call is rejected and the caller hears the busy tone.

Placing a call in a call pickup group

You can use your handset to pick up calls to telephones within your call pickup group (set by the service engineer). This is also possible when you are conducting a call.

Prerequisite:

You hear that a telephone in your call pickup group is ringing.



Press the Talk key. The message "Call for:" appears on the display.

Menu

Call the system menu.



Group Pickup?



Select and confirm the menu item.



Conduct the call.

ு or 🖁

Ending a call

Press the On-hook key or place the handset in the charging shell.

The call charges are displayed, depending on the communication system.

Call forwarding

This function is for when you leave your desk for a while and want certain calls to be forwarded to your new location. The forwarding destination for internal calls can be any internal or external phone number. The destination number is usually an external phone number because you can be reached internally anytime by means of your handset.

Activating call forwarding



Press the Talk key.

Menu


Call the system menu.



Forwarding on?



Select and confirm the menu item.

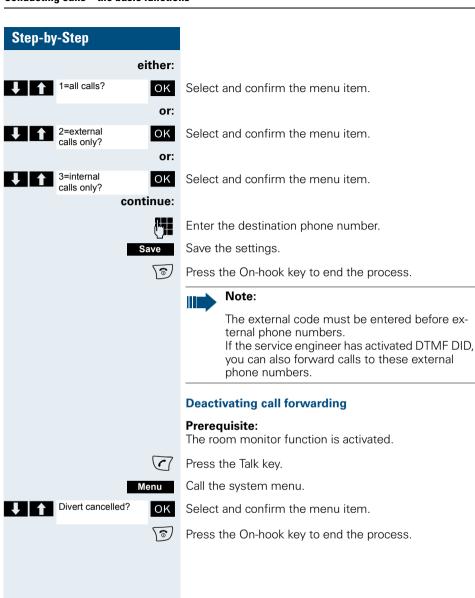

Activating or deactivating the keypad lock

This feature protects against accidentally pressing buttons when the handset is in a pocket, for example. The keypad lock turns off automatically when a call comes in and turns back on when the call has ended.



Press the hash key until the activation or deactivation is confirmed by a crescendo tone sequence.

A key icon on the display indicates that keypad lock is active.

Leaving the radio network

After leaving the radio network

The base name flashes on the display. The handset repeatedly attempts to synchronise with a base. The intervals between synchronisation attempts increase on account of the integrated power saving function.

You can switch off your handset to save the battery. The date and time settings will be lost (→ page 23).

Description of the keys

Function keys

The following function keys are available:

Key	Name	Use	
©	On-hook and on/off key	 End a call Cancel functions Jump back to the previous menu (only following) Activate or deactivate the handset 	
C	Talk key	 Answer a call Dial a phone number Switch from speakerphone mode to handset mode Access telephone system functions 	
(-	Speakerphone key	 Answer a call Dial a phone number Switch from handset to speakerphone mode Access telephone system functions 	
	Message list	Access message lists	
*4	Star key	Activate/deactivate the ringer	
#	Hash key	Activate/deactivate keypad lock	
•	Speed dialling list	Access speed dialling list	
R	R key	R key function (→ page 11)	

R key

The R key provides access to the following functions depending on how it is operated:

Operation	Function
Press	Enquiry function: Make an enquiry (alternative to "Enquiry" Display key)
Press and hold (min. 1 second)	R key function: Insert a pause (e. g. between the prefix and the phone number, or when checking a mailbox) End connection to a mailbox (e. g. when performing a callback, setting up a conference or transferring a call)

Control key

The control key is assigned different functions depending on the operating situation:

Control key	In idle status	In lists and menus	In an input field
	Use voice dial- ling	Next menu level up	Move the cursor up one line
	Open the mo- bile's telephone directory	Next menu level down	Move the cursor down one line
(A)	Open the menu	Select an entry (OK)	Move the cursor right
(A)		Next menu level up, cancel	Move the cursor left

Display keys

The handset has two Display keys, each with one or two functions. When the key is allocated two functions, press the right or left side of the key to select the corresponding function. Display key assignment depends on the operating status. A function can be represented by text or an icon.

Icon	Name	Use	
<u>}</u>	Menu	Call the handset menu	
◆ C	Delete	Delete the entry character by character from right to left	
$\rightarrow \rightarrow$	Number redial	Open a list of the last five phone numbers called	
⊠	Message list	Open message list	
_5	Go Back	Go back to the next highest menu level, cancel	
INT	Internal	Stop entering the phone number after the first digit	
OK	OK	Confirm the selected menu item	
	Up/down	Scroll up or down to select menu items	
Record	Record	Record voice pattern	
Phonebk	Telephone directory	Call the system telephone directory	
Enquiry	Consultation	Make a consultation	
Toggle	Toggle	Toggle between two partners	
2ndCall	2nd call	Accept call waiting	
Callbck	Callback	Conduct a callback with a second partner	
Change	Change	Change the configuration	
Save	Save	Save entries	
Dial	Dial	Dial the digits entered	
Send	Send	Send information message	
Menu	System menu	Call the system menu	
Mnu	Additional menu	Call the additional menu	

Putting the handset into service

Removing the protective cover



Remove the protective cover from the display before putting the handset into service.

Inserting the batteries

Two batteries are provided with the handset. The batteries are supplied uncharged. They are charged in the handset.



Note:

- Please observe the safety notes on the back cover.
- Only use approved batteries (→ page 15).
- Always replace both batteries at the same time and only use two batteries of the same type/ from the same manufacturer!
- Open the battery compartment in a dust-free environment only.
- Your telephone directory entries and all settings remain stored even if you remove the batteries. The date and time settings will be reset.
- Only remove the batteries if they are defective. Any unnecessary removal of the batteries reduces their lifespan.

Opening the battery compartment

Press down on the ridged surface and slide the cover from the battery compartment.

Inserting batteries

Insert the correct batteries according the the pole directions as marked.



Closing the battery compartment

Put the cover back in place and slide it onto the battery compartment until it engages.

Charging and using the batteries

To charge the batteries, insert the handset into the charging shell with the keypad facing forwards.



Caution:

Only use the approved C39280-Z4-C373 power supply unit for operating the charging shell (in the United Kingdom: C39280-Z4-C478).

The charging status is indicated by the charge status display. This flashes during charging:

(I)	Batteries empty
(I)	Batteries 33% charged
()	Batteries 66% charged
0	Batteries 100% charged



Note:

- Initial charging: Charge the batteries for at least 16 hours, regardless of the charging status icon. Without replacing it in the charging shell, use the handset until the "battery low" beep is heard. This action aligns the charge status display with the operating times of the batteries.
- To attain full operating and charging times (→ page 15): Without replacing it in the charging shell, use the handset until the "battery low" beep is heard.
- For future charging: you can place your handset in the charging shell each time it is used. Charging is electronically controlled which ensures that the batteries are charged optimally.

Operating and charging times of the batteries

The operating times are only achieved after several charging and discharging cycles.

Capacity (mAh)	Standby mode (hours)	Talk time (hours)	Charging time (hours)
700	approx. 170 (7 days)	approx. 13	approx. 5.5


Permitted batteries

The following batteries are approved for use with this handset:

Nickel Metal Hydrid (NiMH)
Sanyo Twicell 700
Sanyo Twicell 650
Panasonic 700 mAh
GP 700 mAh
YDT AAA SUPER 700
VARTA PhonePower AAA 700 mAh

Fitting the attachment clip

Press the attachment clip onto the back of the handset until the tabs on the sides engage in the recesses on the phone.

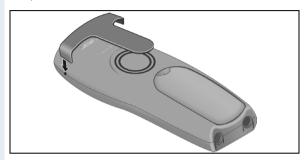

Setting the handset display language

If your preferred language for display texts is not set as the default, then you can set this yourself.

Open the main menu



Open the main menu of the mobile phone.

Open the submenu

Open the submenu

either:





H/Set Settings

oĸ

Select and confirm the menu item.





Einstellungen

oĸ

or:

Select and confirm the menu item.







Language

OK or: Select and confirm the menu item.



OK

Select and confirm the menu item.





Deutsch



Select a language

Select and confirm the language you require.



Press the On-hook key to end the process.



Note:

For how to return the telephone to the default settings (→ page 25).

Setting the system display language


If you wish to change the language of the display texts, then you must also change the system language on the handset. A different language can be set for every handset on the system.




Press the Talk key.

Menü


Call the system menu.

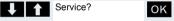


Select and confirm the menu item.

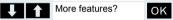

Select and confirm the menu item.

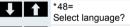

Select and confirm the menu item.

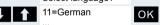

Select and confirm the language you require.



OK


Press the On-hook key to end the process.

Setting the handset

You can change the standard settings of the handset if you are not happy with them.

Setting the handset volume

When selecting the menu, the tone sounds at the current setting in speakerphone mode. You can choose between five volume levels in handset mode and three volume levels in speakerphone mode.

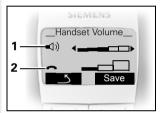


- 1 Volume in speakerphone mode
- 2 Volume in handset mode



Open the main menu of the mobile phone.



Select and confirm the menu item.

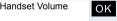

Select and confirm the menu item.







oĸ

Move the cursor down one line.



Save the settings.



Press the On-hook key to end the process.

Setting the ringer

Setting the ringer volume and melody

When selecting the menu, the ringer sounds at the current setting. You can choose between three ringer volumes, as well as a crescendo ring (volume increases gradually) and no ringer. The ten ringer melodies cannot be stored in the communication system.



18






























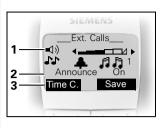

- Ringer volume
- Ringer melody
- 3 Time control activation function for the ringer volume



Display when ringer is deactivated.

In order to better differentiate between your handset's ringing tones, select the following settings:

- Ext. Calls
- Internal Calls
- **Appointments**
- Alarm
- ΑII



Open the main menu of the mobile phone. Select and confirm the required menu item.





Audio Settings








Ringer Settings



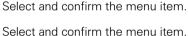















Move the cursor down one line.



Set melody.

- Tones: 1 to 3 (recommended for internal calls)
- Melodies: 4 to 10 (recommended for external calls)

either:



Save the settings.


or: Setting the time control for the ringer

You can select a different ringer volume for a specific length of time in this menu (e.g. during the night).



Note:

Please take account of the special features of the handset's internal clock (→ page 23).

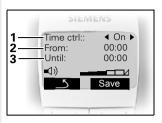

- 1 Time control status
- 2 Start of the time frame
- 3 End of the time frame



Call the ringer time control menu.



Fix the setting.



Move the cursor down one line.



Save the time control settings.

Save the ringer settings.



Press and hold the On-hook key to end the process.

Advisory tones

The advisory tones have the following meaning:

Advisory	Meaning	
Key tone	Every keystroke is confirmed	
Confirmation tones	 Confirmation tone (crescendo tone sequence) when saving inputs/settings and when placing the handset in the charging shell Error beep (decrescendo tone sequence) to signal incorrect inputs End-of-menu beep at the menu end 	
Battery tone	The battery must be charged	



- Key tone status
- Confirmation tone status
- 3 Battery tone status



Open the main menu of the mobile phone.







Select and confirm the menu item.





Advisory Tones





Select and confirm the menu item.






Fix the setting.



Move the cursor down one line.



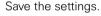



Press and hold the On-hook key to end the process.

Setting the ringer echo

This function enables you to set the tone quality for the longer melodies (4 to 10). When ringer echo is activated, melodies will be played with an echo.





Open the main menu of the handset.



















Select and confirm the menu item.



Ringer echo is activated.



The activated function is ticked. It can be deactivated by selecting the option once more.



Press and hold the On-hook key to end the process.

Activating or deactivating the ringer

Deactivating the ringer



Hold down the key until a confirmation tone is sounded.



The ringer is deactivated.

Activating the ringer



Hold down the key until a confirmation tone is sounded.



Note:

The ringer cannot be activated with the star key if it was deactivated via the menu.

Activating or deactivating the warning tone

When you activate the warning tone, all other tones are deactivated. An incoming call is signalled by this brief tone.

If the handset is in a call pickup group, a pickup call is also signalled by the warning tone.

Activating the warning tone



Hold down the key for a few seconds. A confirmation tone is sounded.



Press the Display key within three seconds.



The warning tone is activated.

Deactivating the warning tone



Hold down the key for a few seconds. A confirmation tone is sounded.



Note:

The warning tone cannot be activated if the ringer was deactivated.

Activating/deactivating automatic call answering


This function allows you to accept calls by removing the handset from the charging shell.



Open the main menu of the mobile phone.



Select and confirm the menu item.

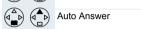

Select and confirm the menu item.



The activated function is ticked. It can be deactivated by selecting the option once more.



OK

Press and hold the On-hook key to end the process.

Setting the date and time

We recommend setting the date and time to ensure the correct time/date is recorded for all calls. You can choose between 12-hour display (am, pm) and 24-hour display.



Note:

Do not switch off the handset after you have made the settings, otherwise the date and time will be reset.

Check the date and time and reset from time to time where applicable.



Open the menu.



Calendar/Clock

OK

Select and confirm the menu item.



Date/Time

ок

Select and confirm the menu item.



Enter the date, e. g. 22.09.2002 = 220902.



Move the cursor down one line.



Enter the time, e. g. 19:05 = 1905.



Move the cursor down one line.



Define the display mode (24 h, 12 h).



Save the settings.



Press and hold the On-hook key to end the process.

Editing the idle display

You can change the base station name that is displayed in idle status. The handset must be registered at the corresponding base.







Open the main menu of the handset.





H/Set Settings





Select and confirm the menu item.



Select and confirm the menu item.





Select Base <Base>





Select and confirm the menu item.



The selected base is activated.

The activated base is ticked. It can be deactivated by selecting another base.



Change settings.

Edit Name: (C





Delete text.



and poss. **(C**

Enter the required text and correct individual characters as necessary using the "Delete" Display key.



Save settings.



Press and hold the On-hook key to end the process.



Press the On-hook key twice to turn the handset off and back on.

The changed base station name will now be displayed in idle status.



Resetting the defaults

This function allows you to reset your mobile phone to the defaults, e.g. if you want to pass it on to someone else or reset it. The following table shows the handset's default settings:

Setting	Explanation/notes	Levels	Default state
Audio Set-	Ringer volume	5	5
tings	Ringer melody	10	1
	Time control for ringer	-	off
	Warning tone	-	off
	Handset volume	3	1
	Volume in speakerphone mode	5	3
	Name announcement	-	off
	Alarm/Appointment	-	off
	Appointment name	-	deleted
	Key tones, audible each time a key is pressed.	-	on
	Battery tone, audible approx. five minutes before the battery runs out.	-	on
	Confirmation tone, indicates whether actions were successful or unsuccessful.	-	on
Auto Answer	Define whether the Talk key must be pressed to accept a call when the handset is removed from the charging shell.	-	on
Select Base	Select the base	4	"Best Base"
Screen Picture	Display in idle status	-	off
Character Set	Available character set	-	Standard
Language	Select different languages.	14	English or German
Default state	Resetting the defaults deletes the redial and direct call numbers and resets the sound settings. The registration (logon) and the handset PIN are retained.	-	-

The handset features are handled as follows when resetting the defaults:

Feature	Action	
Sound settings	are reset	
Speed dialling list	is retained	
System registration	is retained	
Telephone directory	is retained	
Telephone Services menu	depends on the version	
Redial list	is deleted	



Open the main menu of the mobile phone.





H/Set Settings Reset Handset








Yes


Select and confirm the menu item. Select and confirm the menu item. A security check



question appears. Confirm the security check question The handset is re-

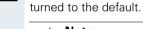

Note:

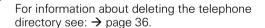

Conducting calls – enhanced functions

Speakerphone mode

Features

Speakerphone mode offers you the following advantages:

- Other persons can listen to and participate in the call
- Your hands are free.
- When dialling, you can hear the ring tone, for example, without having to lift the handset to your ear.

Speakerphone mode can be used effectively up to a background noise level of 50 dB (A).

Activating speakerphone mode

Speakerphone mode can be activated during a call, when dialling or when answering a call:



Press the Speakerphone key.

Setting the volume

The volume can be set during a call:



Press the Speakerphone key once more.



r 🐏

Within three seconds: Press the left or right side of the control key to reduce or increase the volume.

Save

Within three seconds, as necessary: Save the volume set.

Deactivating speakerphone mode

You can deactivate speakerphone mode and switch to handset mode during the call:



Press the Talk key.



Note:

If you wish to replace the handset in the charqing shell during a call, e. g. because the battery is empty, hold down the Speakerphone key.

Voice dialling

With the voice dialling function, you can dial a number simply by saying the partner's name. You do not need to manually dial a phone number.

For this function, you will need to record a voice pattern, in other words, your voice saving the name will be saved in the handset. Up to four users can save a voice pattern for each entry. The user must be identified, i.e. as User 2, before recording. A total of 29 voice patterns can be saved for telephone directory entries. An entry that has a corresponding voice pattern is marked with a mouth in the voice telephone directory.

Recording a voice pattern for an existing telephone directory entry

You should record your voice pattern in a quiet environment. There should be about 25 cm between you and the handset.



Open telephone directory.





Select the required entry.



Press the Display key.











Select and confirm the menu item. Press and confirm the Display key.

Say the name when the relevant prompt is displayed. Repeat the name after being prompted again. The recording will be saved automatically.



Press and hold the On-hook key to end the process.

A message will notify you if your voice pattern is too similar to that of another user.



The message will end.

Return to the beginning of the voice recording and record your voice pattern again.

Using voice dialling



Press and hold the control key and then say the name.

Listening to a voice pattern



Open the voice dialling telephone directory.





Select the required entry.

Voice

Press the Display key.





ок

Select and confirm the menu item.



Play the corresponding voice pattern.



Press and hold the On-hook key to end the process.

Changing or deleting voice patterns



Open the telephone directory.



Select the required entry.



Press the Display key.







ΟK



Open the menu.

either:





Record Name



Select and confirm the menu item.

Select and confirm the menu item.

or:





Delete Name



Select and confirm the menu item.



Press and hold the On-hook key to end the process.



Note:

The phone number and name are retained after an entry has been deleted. Other users' voice patterns also remain.

Changing a user name



Open the telephone directory.



Select the required entry.



Change


Press the Display key.



Select the menu item.



Change the settings.

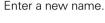





Press and hold the On-hook key to end the process.

Number redial

The last five phone numbers dialled are automatically saved in the redial list.

If you tried to call a party from the handset's telephone directory, the name of the party is displayed in case of number redial.

Automatic redial

The phone number is automatically redialled ten times at 20 second intervals. Speakerphone mode is automatically activated, the Speakerphone key flashes. The function is deactivated after ten unsuccessful attempts and when a call is made in the interim.



Call the redial list.





Press the top or bottom of the control key to select the required phone number.



Open the menu.







Automatic Redial



Select and confirm the menu item. Automatic redial is activated





The user answers and you conduct the call.

or:

Off

If you wish to cancel the function: press the Display key or any key.

Deleting a phone number from the redial list



Call the redial list.





Press the top or bottom of the control key to select the required phone number.



Open the menu.





Delete Entry



Select and confirm the menu item. The telephone number is deleted.





Press and hold the On-hook key to end the process.

Adding a telephone number to the redial list





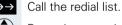

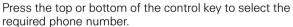



Open the menu.





Copy to Directory



Select and confirm the menu item. The telephone number is deleted.



Enter the name (max. 16 characters), change the phone number is necessary and enter the date.



Open the menu.





Save the entry.



Press and hold the On-hook key to end the process.

Service?

*7=Use speed dial-

System speed dialling

A system speed dialling destination is a call number you dial using a code, e.g. the external phone number (0 28 21) 34 56 78 using code 243. System speed dialling destinations are defined by the system administrator. Codes from 000 to 999 can be used.

This function can also be called by entering the code (→ page 88).

Dialling a speed dialling destination

(7

oĸ

OK

Menu

Press the Talk kev.

Call the system menu.

Select and confirm the menu item.

Select and confirm the menu item.

Enter the required code (3 digits, 000 - 999).



Note:

The saved speed dialling destinations and the associated codes can be obtained from the organisational unit responsible for administering the communication system.

Individual system speed dialling

You can save up to ten external phone numbers for your handset as speed dialling destinations. These speed dialling destinations are dialled using a 2-digit code (00 to 09). Please note that you may need to save an external code in front of the phone number.

This function can also be called by entering the code (→ page 88).

Setting up an individual speed dialling destination



Menu

Press the Talk key.

Call the system menu.

Select and confirm the menu item.

Service?

oĸ

32

Step-by-Step *92=Change Speed Select and confirm the menu item. OK Abb. dial no: Call the first destination. Call the next destination. Call the additional menu. Mnu Change entry? ΟK Select and confirm the menu item. M Enter the external phone number (with external code). The key "#" means that the subsequent digits are sent as DTMF tones. Save the settings. Save (a) Press and hold the On-hook key to end the process. Dialling an individual speed dialling destination (1) Press the Talk key. Menu Call the system menu. Service? OK Select and confirm the menu item. *7=Use speed dial-OK Select and confirm the menu item. Abb. dial no: *4 Enter the code for the speed dialling destination. System telephone directory

If the system administrator has entered a name for at least one internal user or system speed dialling destination, then you can use the system telephone directory for dialling purposes.

Calling the system telephone directory

Press the Talk key.

Phonebk

Call the system telephone directory. The first entry appears.

Finding an entry



Enter the first letters of the name you are looking for. The name search begins.

The search result becomes more precise as each letter is entered, i.e. the number of names found is reduced. Only the first letter of a key can be entered.



Select the user you want.

Dialling the entry

ок

Confirm your selection. The selected number is called.

Quitting the redial list



Press the Display key.



Note:

Phone numbers dialled from the "System telephone directory" are not stored in the redial list.

Handset telephone directory/speed dialling list

A total of up to 200 entries can be saved in the telephone directory, the e-mail directory and the speed dialling list.

Operation of the telephone directory and the speed dialling list is identical. The anniversary function is not available in the speed dialling list, however, but you can allocate a number for up to nine new entries. The external code must be entered before external phone numbers, e. q. "0".

Save the entry.







Open the telephone directory or speed dialling list.

Select and confirm the menu item.













Enter a phone no.

Jump to the name field and enter the name and, if reguired, the anniversary. Predictive text can be used for this (\rightarrow) page 82).

either (for telephone directory):



Open the menu.





Save



Save the entry.

or (for speed dialling list):





Define settings.

Save

Save settings.









Open the telephone directory or speed dialling list.

You can scroll to the required entry or enter the first letter of the relevant entry.

If necessary, press a key several times in succession to enter the required letter.

either:



Press the Talk key. The assigned phone number is dialled

or:



Open the menu.





Display Number



Select and confirm the menu item. The number is displayed.



Press the Talk key.

Changing an entry







Open the telephone directory or speed dialling list.

You can scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter.



Open the menu.

either:





Edit Entry



Select and confirm the menu item.






Copy and Edit



Select and confirm the menu item.



Enter changes.

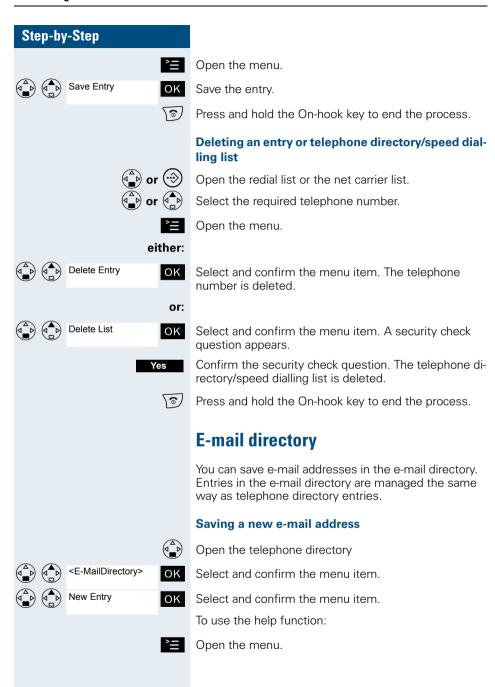







Select and confirm one of the following menu items:

- Insert '.'
- Insert '@'
- Predictive text, → page 82



Enter address.



Open the menu.





Save Entry



Save the settings.



Press and hold the On-hook key to end the process.

Changing an e-mail address



Open the telephone directory.





<E-MailDirectory>



Select and confirm the menu item.





Select the required entry.



View entry.



Change entry




Open the menu.









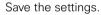




Press and hold the On-hook key to end the process.

Directed assignment of an MSN (multiple subscriber number)

Multiple subscriber numbers are phone numbers belonging to an ISDN multiple device line. They are used for the directed addressing of terminals, for example when a fax machine has a separate number. Before selecting an external connection, you can directly assign a configured multiple subscriber number. This then appears on the called party's display.

This function can also be called by entering the code (→ page 88).

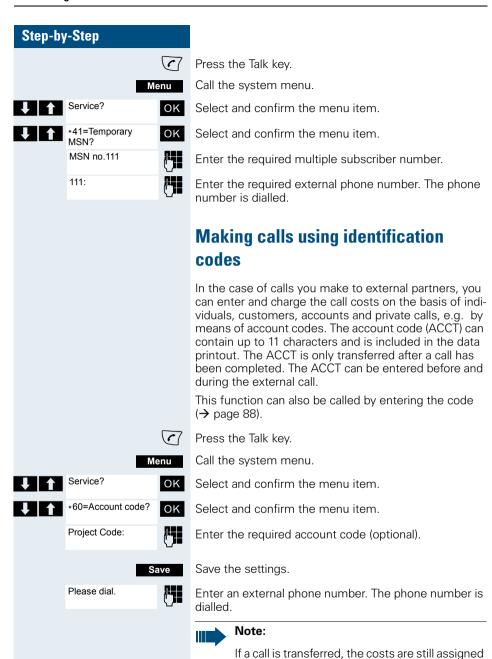

to the ACCT entered.

Using the handset as a second line

You can use your mobile phone for an outgoing call as if it were another line (temporary phone).


This function can also be called by entering the code (\rightarrow) page 88).




Press the Talk key.

Menu

Call the system menu.

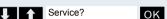

Select and confirm the menu item.

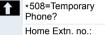

Select and confirm the menu item.



οк

Enter the internal phone number for the relevant line.



Enter the code (lock code) for the relevant line (→ page 85).

If there is no personal code for the relevant line, the system will prompt you to enter the code.



Enter the required phone number. The phone number is dialled

The "Temporary phone" function is discontinued again after the call is complete.

Deactivating the phone number display

Your service engineer can deactivate the display of your phone number and name on the called party's display for external outgoing calls. You can also activate and deactivate the phone number display on your own handset yourself.

Deactivating the phone number display



Press the Talk key.

Menu

Call the system menu.



Suppress call ID?




Select and confirm the menu item.





Press the On-hook key to end the process.

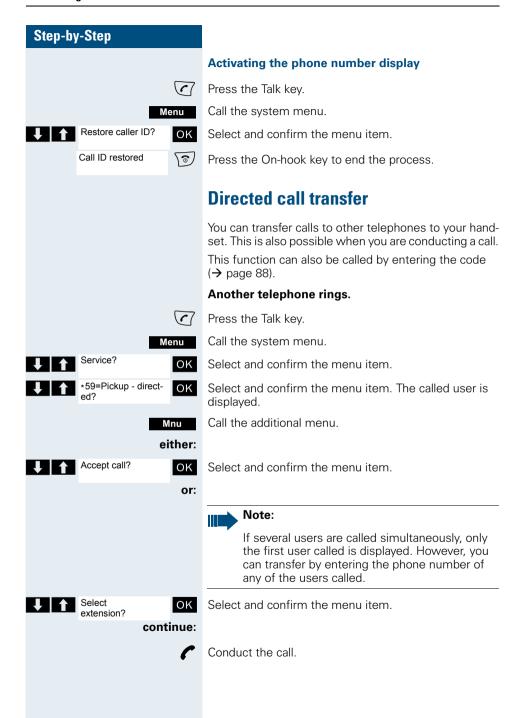

Activating/deactivating do not disturb

You can block calls to your handset on a temporary basis, while still being able to make calls yourself. Internal callers hear the busy tone, while external callers reach another telephone defined by the service engineer (intercept position). Authorised internal callers automatically override the do not disturb after five seconds.

Activating do not disturb

0

Press the Talk key.

Menu

Call the system menu.

Do Not Disturb ON?



Press the On-hook key to end the process.

Select and confirm the menu item.


Deactivating do not disturb



Press the Talk kev.

Menu

Call the system menu.

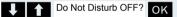

Select and confirm the menu item.



Press the On-hook key to end the process.

Call charge display

After a call has ended, the display shows the connection charges for the current call as standard. If the costs are to be displayed continuously during an outgoing call, this function must be requested from the carrier.



Note:

If a call is transferred, the costs are assigned to the telephone to which the call was transferred from this point onwards.

You can check and display the call charges for your phone number as a total for a period that can be set by the service engineer.

First the call charges for the last charged call are displayed. The total call charges are displayed after five seconds.

Step-by-Step This function can also be called by entering the code (→ page 88). Press the Talk key. Menu Call the system menu. Service? oĸ Select and confirm the menu item. *65=Show call charg- OK Select and confirm the menu item. (3) Press the On-hook key to end the process. **Call trace** You can apply to your carrier for "call tracing" on malicious calls. An authorised extension is then in a position to request the identification of the phone number. This also works for 30 seconds after the malicious caller has hung up. However, you should not hang up. This function can also be called by entering the code (→ page 88). You receive a malicious call. Do not hang up. Menu Call the system menu. Service? OK Select and confirm the menu item. *84=Trace call? Select and confirm the menu item. The caller is identiок fied in the attendant console. (a) Press the On-hook key to end the process.

Entrance telephone

If the service engineer has set up an entrance telephone, you can speak to the door intercom and activate the door opener from your handset.

If you are authorised to release a door, then a user can open the door by entering a 5-digit code (e.g. by means of a DTMF transmitter or installed keypads).

Some of the functions described below can also be called directly by entering the relevant code (+) page 88).

Talking to a visitor by means of the door opener equipment

Your handset rings.

either:



Press the Talk key within 30 seconds. You are connected immediately to the door opener.

or:



If more than 30 seconds have passed: Press the Talk key.



Enter the internal phone number for the door opener. You are connected to the door opener.

Using the handset to open the door opener during a call





Open door?



Select and confirm the menu item.

Using the handset to open the door opener without holding a conversation



Press the Talk key.

_

Menu Call the system menu.





Service?



Select and confirm the menu item.





*61=Open door?



Select and confirm the menu item.



Enter the internal phone number for the door opener. The door is opened.



Press the On-hook key to end the process.

Activating the door release

This function only works if it has been configured by the service engineer.



Press the Talk key.

Menu

Call the system menu.





Select and confirm the menu item.



*89=Door release ON?



Select and confirm the menu item.



Follow the user guidance system from this point onwards. Enter the internal phone number of the door opener, as well as the code and type of door release:

- 1=Enable with call.
- 2=Enable without call.
- 3=Change password.



Confirm your entries.



Press the On-hook key to end the process.



Note:

Standard code 00000. To change the code, confirm option "3=Change Password". Follow the user guidance system.

Deactivating the door release



Press the Talk key.



Call the system menu.





Service?



Select and confirm the menu item.





*89=Door release



Select and confirm the menu item.



Press the On-hook key to end the process.

TDS telephone data service

You can use your mobile phone to control connected computers and their programs, e. g. hotel services or information systems.

This function can also be called by entering the code (→ page 88).

Step-by-Step Press the Talk key. Call the system menu. Menu Service? oĸ Select and confirm the menu item. *42=Tel. data OK Select and confirm the menu item. service? TDS code: Press the "#" key and enter the required code (0... 9). The connected computer responds. The computer will quide you through the data entry process. It will process your entries directly. (3) Press the On-hook key to end the process. **Activating control relays** The service engineer can set up a maximum of 4 control relavs that enable various equipment (e.g. door opener) to be activated and deactivated. It is possible to access a specific control relay. Depending on the configuration, the control relays can be activated and deactivated automatically, or activated and deactivated automatically on the basis of a timer. Prerequisite: The service engineer has set up at least one switch. This function can also be called by entering the code (→ page 88). **Activating a control relay** (1 Press the Talk key. Menu Call the system menu. Service? ок Select and confirm the menu item. *90=Control Relay OK Select and confirm the menu item. On? Follow the user guidance system from this point onwards. Enter the required switch code (1... 4).

(a)

Press the On-hook key to end the process.


(67

Deactivating a control relay



Press the Talk key.

Menu

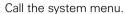

Service?



#90=Control Relay

Select and confirm the menu item.

Select and confirm the menu item.



oĸ

Follow the user guidance system from this point onwards. Enter the required switch code (1... 4).



Press the On-hook key to end the process.

Sending a signal to the network

To enable ISDN-type services/ features to be started via analog lines (e.g. call waiting when a line is busy, threeway conference calls, etc.), you must send a signal to the network before dialling the service code and/or phone number.

This function can also be called directly by entering the code (→ page 88).



You have an external connection.



Call the system menu.



Service?

oĸ

Select and confirm the menu item.



*51=Recall to Net-

oĸ

Select and confirm the menu item.



Enter the service code and/or the phone number.

External call forwarding with a multiple subscriber number

If your communication system is connected to an ISDN multiple device line, then you can forward all incoming calls from the public network through your multiple subscriber number (MSN) to an external destination.

There are three types of forwarding:

- Calls are forwarded immediately (1=immediate call forwarding).
- Calls are forwarded after a certain time (2=unanswered calls).

Step-by-Step	
	 Calls are only forwarded when the line is busy (3=when busy).
	Activating call forwarding to a "trunk"
	Press the Talk key.
Menu	Call the system menu.
Service? OK	Select and confirm the menu item.
Trunk FWD on? OK	Select and confirm the menu item.
В ОК	Enter and confirm your own multiple subscriber number.
either	
1=immediate? OK	
2=on no answer? OK	Select and confirm the menu item.
Or:	
continue	
!!!	Enter the phone number of the destination (without external code).
Save	Save the settings.
	Deactivating call forwarding to a "trunk"
	Press the Talk key.
Menu	Call the system menu.
Service? OK	Select and confirm the menu item.
Forward by Network OK	Select and confirm the menu item.
9	Follow the user guidance system from this point onwards (enter a multiple subscriber number or DID and forwarding type).
OK	Confirm your entries.
	Press the On-hook key to end the process.

Step-by-Step **Using night service** In night service mode, for example during lunch breaks or after office hours, all external calls are forwarded to a particular internal telephone (night station) The night station can be defined by the service engineer (= standard night service) or by you (= temporary night service). When night service is active, the night station assumes the function of the intercept station. **Activating night service** Press the Talk key. Menu Call the system menu. Night answer on? ок Select and confirm the menu item. either: *=default? ок Select and confirm the menu item. "Standard night service" is configured. or: Enter an internal phone number. Save the settings. Save "Temporary night service" is configured. (a) Press the On-hook key to end the process. **Deactivating night service** Press the Talk key. Menu Call the system menu. Night Service - OFF? OK Select and confirm the menu item. \@\ Press the On-hook key to end the process.

Using dual-tone multifrequency signalling

Your handset operates on the basis of digital information transmission. However, certain applications, e. g. answering machines, can only be controlled using analog technology. For this you must send signals using the dual-tone multifrequency signalling (DTMF) process.

Depending on how your system is configured (automatic tone dialling on or off - to be configured by the service engineer) you must first switch to DTMF dialling. This means, for example, that you can communicate with a variety of voice storage systems.

You will find further details in the operating instructions for the relevant applications.

Automatic tone dialling is not active

During a connection you must first switch to dual-tone multifrequency signalling.



You are on a call.



Call the system menu.



♠ Service?

OK

Select and confirm the menu item.

Select and confirm the menu item.



*53=Tone dialling?



nals.

Enter the numbers. All entries are sent as DTMF sig-



Automatic tone dialling is active



Enter the numbers. All entries are sent as DTMF signals.

Conducting calls – enhanced functions Step-by-Step **Parking/activating calls** You can park up to ten calls (i.e. place them on hold) and then reactivate them at other telephones in your communication system. Parking a call You are on a call you wish to park. Menu Call the system menu. Service? OK Select and confirm the menu item. *56=Park a call? Select and confirm the menu item. OK M Enter and note the parking position number (0... 9). If the parking position number entered is already in use, you must enter another one. Picking up a specific parked call Prerequisite: One or more calls have been parked. Your handset is in standby status. (7 Press the Talk key. Menu Call the system menu.

Select and confirm the menu item.

Select and confirm the menu item.

Note:

Enter the parking position number you have noted.



OK

OK M

#56=Retrieve call?

If a parked call is not picked up, it returns to the station from which it was parked after a certain time (= recall). The following appears on the display "Recalling: (phone no. or name)" or "Recalling from (phone no. or name)".

Conducting calls – with multiple users

Call waiting

You need to speak to a user in your communication system urgently, even though his line is busy. You can send a call waiting signal during his call to let him know you want to talk to him. The user either answers immediately or you will be automatically connected to him when he has finished his call


This function is only available if it has been configured by the service engineer.

The user is busy. You want to use call waiting.

Wait until the message "Camp-on" appears on the display (ringing tone).

You receive a call waiting signal (second call)

You are still available to other callers, even though you are on the telephone. The call waiting signal informs you of the second call while you are conducting a call. You can answer this call without ending the first call.

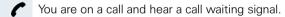

If you want to answer the second call, you can either place the first call on hold (the first caller waits) or end the first call.

Placing the first call on hold and answering the second call

2ndCall

Answer the second call.

Talk to the second caller. The first caller waits. His call is on hold. You can now

- toggle between the two callers (→ page 56) or
- set up a conference (→ page 57).

Step-by	y-Step		
			Ending the second call
	eithe	r:	
	Menu		Call the system menu.
1 1	Quit and return?	K	Select and confirm the menu item.
	c	r:	
		D	Press the On-hook key. The following message appears on the display: "Recalling". Your handset rings.
	V	7	Press the Talk key to talk to the first caller again.
			Ending the first call.
		D	Press the On-hook key. The first call is ended. Your handset rings.
		7	Press the Talk key and answer the second call.
			
			Call waiting tone off/on
			You can suppress the call waiting tone for external calls.
			Deactivating the call waiting tone
		7	Press the Talk key.
	Menu		Call the system menu.
1 1	Waiting tone off?	K	Select and confirm the menu item.
		9	Press the On-hook key to end the process.
			Activating the call waiting tone
		7	Press the Talk key.
	Menu		Call the system menu.
1 1	Waiting tone on?	K	Select and confirm the menu item.
		D	Press the On-hook key to end the process.

Disabling/enabling automatic call waiting

You can disable/ enable automatic call waiting signalling for a second call during a telephone conversation.

Disabling the call waiting tone

6

Press the Talk key.


Menu

Call the system menu.



OK

Select and confirm the menu item.

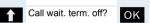

Select and confirm the menu item.



Press the On-hook key to end the process.

Enabling the call waiting tone



Press the Talk key.




Call the system menu.



Service? OK

Select and confirm the menu item.

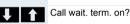

Select and confirm the menu item.



OK

Press the On-hook key to end the process.

Override

You need to speak to an internal user urgently, even though his line is busy. The "Override" function allows you to interrupt the ongoing call to pass on a message.

This function is only available when the code has been input and if it has been configured by the service engineer.



The user is busy.



Call the function.

Override



Enter the phone number of the busy user.

Step-by-Step <Name> The override is established. The user name or phone number to whom/which the call has been transferred. is displayed. Override is ended when you hang up the handset. Note: During override all users hear an override tone and everything that is said. all users see the following message on the display "Override:....:". **Transferring calls** Transferring a call means that you wish to hand over a call you are conducting on your handset to another user. **Transferring** (without announcing the transfer) You can use this function to forward a call which you answered to another user. Menu Call the system menu. Start transfer? OK Select and confirm the menu item. The current call is placed "on-hold", so that the first user waits. Enter the phone number of the user to whom the call is to be transferred The number is dialled. either: (a) Press the On-hook key. The target user's phone rings. He picks up the call by lifting the handset. or: Call the system menu. Menu Transfer? oĸ Select and confirm the menu item.

You receive a recall

- immediately if you have made a mistake,
- 45 seconds after the transfer if the required user does not answer.

If you do not answer recalls, another telephone defined by the service engineer is called (intercept station).

Transferring (with announcement of call transfer)



You can use this function to forward a call which you answered to another user

Menu

Call the system menu.



OK

Select and confirm the menu item.

The current call is placed "on-hold", so that the first user waits.



Enter the phone number of the user to whom the call is to be transferred



The number is dialled. The user answers. You announce the call presently on hold.

either:



Press the On-hook key. The user answers the call.

or:

Menu

Call the system menu.





Transfer?

OK

Select and confirm the menu item.

Placing a call on hold

You can interrupt a call temporarily if, for example you want to talk to someone else in the room. The line is placed "on hold".



You are on a call.



Press the R key or Display key. The current call is placed "on hold", the user waits.

Resuming the call with the waiting user

either:

Menu

Call the system menu.



Quit and return?



Select and confirm the menu item. You are reconnected to the partner.





Press the R key.

Toggling

The Toggle function allows you to switch between two users without allowing them to speak to each other directly. The two users can be either external or internal users. You can also withdraw from the calls and connect the two users with each other. You can also start a conference.



You are on a call.



Call the system menu.



Press the Display key. The current call is placed "on hold", the user waits.



Enter the phone number of the second user.



The second user answers.

Toggle

Press the Display key to switch between the two calls.

When you end a call, the two users are connected with each other (not possible when both users are external).

Conducting a conference

You can connect up to 5 internal or external partners with each other in a telephone conference. You can include up to 4 external users in the conference.

For information purposes, you will hear a warning tone every 30 seconds during a conference call (can be disabled - ask your service engineer).

Setting up a conference

You decide to set up a conference while talking to a user.

Menu

You are on a call and wish to start a conference.

Call the system menu.



Start conference?

OK

Select and confirm the menu item.



Enter the phone number of the new user.



The user is free and answers the phone. You announce the conference.



Call the system menu.



Conference?

OK

Select and confirm the menu item.

You and your two partners are connected in a conference call.

Forming a conference

A conference has not yet been set up. However, you are already connected to two users and are toggling between them. You now want to form a conference involving all partners.



You are talking to one user.

Menu

Call the system menu.





Conference?

OK

Select and confirm the menu item.

You and your two partners are connected in a conference call.

Step-by-Step **Expanding a conference** You can expand an existing conference to include up to five users. You are connected with two or more partners in a conference call. Menu Call the system menu. Add party? oĸ Select and confirm the menu item. Conference is placed "on hold", the users wait. Enter the phone number of the new user. The user is free and answers the phone. You announce the conference. Menu Call the system menu. Conference? Select and confirm the menu item. The new user is in-OK cluded in the conference call. **Ending a conference** You are connected with two or more partners in a conference call. Menu Call the system menu. End conference? Select and confirm the menu item. The conference is oĸ ended. Leaving a conference (a) Press the On-hook key. You leave the conference. When one user leaves the conference, the other two users remain connected. Viewing the names of conference parties

As the convener of the conference, you can view the

You are connected with two or more partners in a con-

names of all conference parties.

ference call.

58

Step-by-Step Viewing the conference parties list Call the additional menu. Mnu View conf parties? ок Select and confirm the menu item. The first party is displayed. View other parties. Closing the conference party list Call the additional menu. Mnu Exit list? ок Select and confirm the menu item. The conference party list is closed. Disconnecting a party from the conference As the convener of the conference, you can disconnect users from the conference. You are connected with two or more partners in a conference call Call the system menu. Menu View conf parties? OK Select and confirm the menu item. The first party is displayed. Display the required party. Mnu Select and confirm the menu item. Remove party? ок Select and confirm the menu item. The relevant party is disconnected from the conference. **Connecting parties** As the conference convener, you can leave the conference and thereby connect the other parties with each other. If you were previously connected with two or more parties, the other parties remain in a conference. Otherwise, the remaining two users conduct a one-toone call. You are connected with two or more partners in a conference call. Call the system menu. Menu Withdraw? OK Select and confirm the menu item. The first party is displayed. (@) Press the On-hook key. You leave the conference; the remaining parties are connected with each other.

Using the second call function

The second call is an incoming call that is signalled on your handset during a call and that can be queried by you (e.g. \rightarrow page 51).

A second call can be answered in the following call states:

- You are on a single call,
- You are on an enquiry call,
- You are holding a conference,
- You are on a call which you intend to add to a conference,
- You are toggling between two partners.

Group functions

Activating/deactivating group calls

If this has been configured by the service engineer, you belong to one or more groups of users who can be reached by means of a hunt group or group call phone number.

Calls are signalled on all telephones in the group either in succession (=hunt group) or simultaneously (=group call), until a member of the group answers the call.

Every user in the group can also remain available under his own phone number.

You belong to a hunt group or group call group



Press the Talk key.

Menu

Call the system menu.





Leave hunt group?



Select and confirm the menu item. The group call is deactivated.





Join hunt group?



Select and confirm the menu item. The group call is activated.

continue:



Press the On-hook key to end the process.

You are a member of several groups

Activating/deactivating individual groups



Press the Talk key.

Menu

Call the system menu.

either:







Leave hunt group?




Select and confirm the menu item.

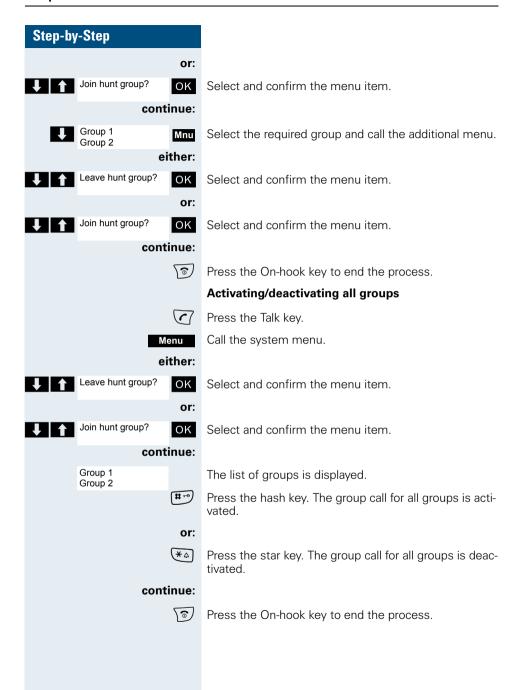

Step-by-Step Ringing group on You can have calls to your handset signalled acoustically on up to five other telephones. The call is received by the person who answers the call first. Adding users to a group First user (1) Press the Talk key. Menu Call the system menu. Service? OK Select and confirm the menu item. *81=Ringing group oĸ Select and confirm the menu item. Call the additional menu. Mnu Add ext to group? OK Confirm Enter the required internal phone number. Save the settings. Save Other users: Mnu Call the additional menu. Add another ext? Select and confirm the menu item. OK Enter the required internal phone number. Save the settings. Save (a) Press the On-hook key to end the process. **Deleting users** (1) Press the Talk key. Menu Call the system menu. Service? OK Select and confirm the menu item. *81=Ringing group Select and confirm the menu item. oĸ Call the additional menu. Mnu Display/Clear? Select and confirm the menu item. The first user added ΟK is displayed.

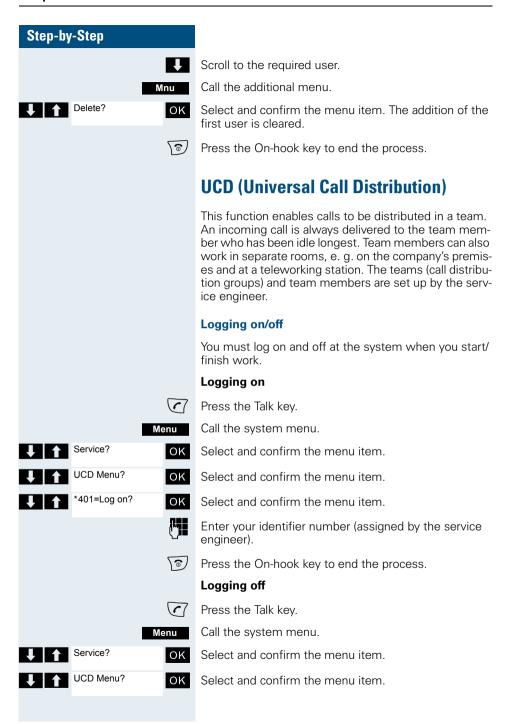

Step-by-Step #401=Log off? OK Select and confirm the menu item (a) Press the On-hook key to end the process. Logging on/off temporarily You can log on or off at the system temporarily, e.g. during break times. Logging on (1) Press the Talk kev. Menu Call the system menu. Service? ΟK Select and confirm the menu item. UCD Menu? ок Select and confirm the menu item. *402=Log on? OK Select and confirm the menu item. (@) Press the On-hook key to end the process. Logging off (1) Press the Talk kev. Menu Call the system menu. Service? oĸ Select and confirm the menu item. ♠ UCD Menu? OK Select and confirm the menu item. #402=Not available? ок Select and confirm the menu item. (3) Press the On-hook key to end the process. Wrap-up time If you need more time than the actual call lasts, you can request/activate a wrap-up time for the last call. This can be a fixed length of time or, alternatively, you must deactivate the wrap-up time yourself (log back on). Requesting time Press the Talk key. Menu Call the system menu. Service? OK Select and confirm the menu item.

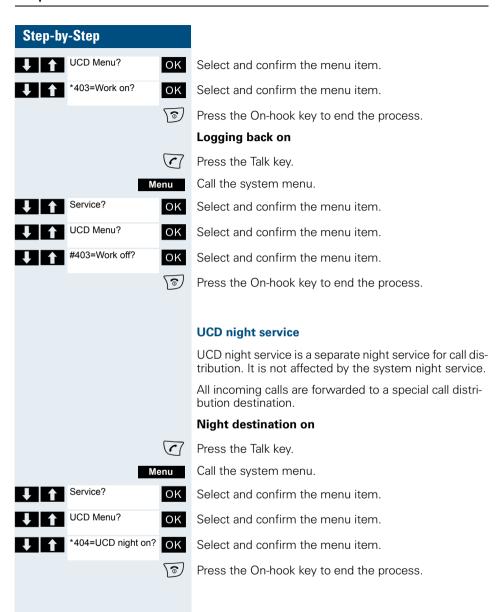

Step-by-Step Night destination off (1 Press the Talk key. Call the system menu. Menu Service? OK Select and confirm the menu item. UCD Menu? OK Select and confirm the menu item. #404=UCD night off? Select and confirm the menu item. OK (a) Press the On-hook key to end the process. Checking the number of waiting calls You can check the number of waiting calls for the group. (67 Press the Talk kev. Menu Call the system menu. Service? ок Select and confirm the menu item. UCD Menu? OK Select and confirm the menu item.

*405=Calls in

queue?

OK

\@/

Mulap group (Multiple Line Application)

Select and confirm the menu item.

Press the On-hook key to end the process.

If your handset's line belongs to a Mulap group (Multiple Line Application), then you can

- answer calls for the group (press the Talk key in group calls)
- make external telephone calls under the group phone number (the group phone number is stored in the called party's caller list, for example)
- activate and deactivate the group call function for your handset's line
- forward the lines of the Mulap group to internal or external destinations

Step-by-Step Activating/deactivating group calls (1) Press the Talk key. Call the system menu. Menu Service? oĸ Select and confirm the menu item. More features? OK Select and confirm the menu item. either: #85=Leave hunt Select and confirm the menu item. oĸ aroup? or: *85=Join hunt oĸ Select and confirm the menu item. aroup? continue: (@) Press the On-hook key to end the process. Forwarding a Mulap line You can immediately forward internal and/or external calls to your lines to different internal or external telephones (destinations) (external destinations are also possible if the system is configured accordingly). If you activate call forwarding for a line, this shall apply to all line keys of your group for this line. Forwarding on (1) Press the Talk key. Call the system menu. Menu Service? OK Select and confirm the menu item. More features? oĸ Select and confirm the menu item. *501=Forward Line: OK Select and confirm the menu item. Enter a line number. either: 1=all calls? ок Select and confirm the menu item.

Step-by-Step or: 2=external calls on-ly? ΟK Select and confirm the menu item. or: 3=internal calls only? OK Select and confirm the menu item. Enter the destination number. Save Save the settings. (a) Press the On-hook key to end the process. Forwarding off (1) Press the Talk key. Menu Call the system menu. Service? OK Select and confirm the menu item. More features: OK Select and confirm the menu item. #501=Forward Line: OK Select and confirm the menu item. Enter a line number. [®] Press the On-hook key to end the process.

Message functions

The message functions enable you to react to voice mail/call back services of the communication system or of other users or to initiate information features yourself.

Leaving a message/advisory message

A number of advisory messages are stored in your communication system that can be automatically sent to the caller when an internal call is not answered (in the case of handsets and telephones with display). These advisory messages can be selected and supplemented in part by you:

- 0 = Will return at:
- 1 = On vacation until:
- 2 = 1 am out until:
- 3 = Out all day
- 4 = Out to lunch
- 5 = Not available
- 6 = Home phone:
- 7 = Contact:
- 8 = Avail at:
- 9 = Am in room:

These advisory messages are standard texts and may have been changed in your communication system.

Activating an advisory message



Press the Talk key.



Call the system menu.



Advisory msg. on?

oĸ

Select and confirm the menu item.

either:



0 = Will return at: 1 = On vacation until:

OK

Select the required advisory message.

If necessary

Expand the message as necessary.

Save

Save the settings.

or:



Enter message text



Select and confirm the menu item.



Enter the required advisory message. Typing errors cannot be corrected.



Note:

For example, if you want to enter the third character on a key: press the relevant key three times in succession

Save

Save the message.

continue:



Press the On-hook key to end the process.

Deactivating an advisory message



Press the Talk kev.

Menu

Call the system menu.



Absence Text OFF?



Select and confirm the menu item.



Press the On-hook key to end the process.

Sending/calling text messages

Messages can be sent internally to other handsets or telephones with display. These text messages can be selected and supplemented in part by you:

- 0 = Please callback
- 1 = Someone is waiting
- 2 = Appointment
- 3 = Urgent call
- 4 = Do not disturb
- 5 = FAX waiting
- 6 = Dictation please
- 7 = Please make copies
- 8 = Please make coffee
- 9 = Ready to depart

These text messages are standard texts and may have been changed in your communication system.

Step-by-Step Send a text message (67 Press the Talk key. Call the system menu. Menu Send Message? OK Select and confirm the menu item. Message to: Enter the phone number for the required internal user. either: Please callback OK Select the required advisory message. Someone is waiting or: Enter message text oĸ Select and confirm the menu item. P4 Enter the required text message with the help of predictive text, if needed (→ page 82). Typing errors cannot be corrected. Note: For example if you want to enter the third character on a key: press the relevant key three times in succession. continue: Send Press the Display key. (&) Press the On-hook key to end the process. Opening an incoming text message $oldsymbol{\square}$ When your handset receives a text message, an advisory tone sounds and an advisory text is displayed. The "Message List" icon is displayed. The date and time of incoming text messages are based on the communication system's internal clock. Press the "message list" key. Msg. from: Mnu Call the additional menu. Text oĸ Select and confirm the menu item. The text message is displayed. (a) Press the On-hook key to end the process.

Answering a message or voice-mail message

You have new messages received

An advisory message appears when you have received a message or voice mail.

Viewing a new message

either:

Press the message key.

or:

(07

Press the Talk key.

Messages received

Menu

OK

Call the system menu.

Display Messages?

Select and confirm the menu item.

l ok l

Select the required message and confirm your selection

continue:

Msg. from:

Mnu

Call the additional menu.

ок

Select and confirm the menu item.

Mnu

Call the additional menu.

Time/date sent?

OK

Select and confirm the menu item. The time of the message is displayed.

either:

sender.

Mnu

oĸ

Call the additional menu. Select and confirm the menu item. You call back the

or:

Delete?

Call Sender?

OK

Select and confirm the menu item. The entry is deleted.

continue:



Press the On-hook key to end the process.

Step-by-Step Check for a new voice-mail message either: Press the message key. or: (1) Press the Talk kev. Messages received Call the system menu. Menu Display Messages? oĸ Select and display menu item. Follow the user guidance system from this point onwards. \@/ Press the On-hook key to end the process. Calling an old message Old messages that have not been deleted cannot be displayed using the message key (2). To call these messages, proceed as follows: (1) Press the Talk key. Messages received Menu Call the system menu. Display Messages? oĸ Select and confirm the menu item. Msg. from: Mnu Select the required message and call the additional menu. Text? OK Select and confirm menu item. <Text> Call the additional menu. Mnu Time/date sent? oĸ Select and confirm the menu item. The time of the message is displayed. at: ... Call the additional menu. Mnu either: Call Sender? Select and confirm the menu item. The sender is called OK back.

or:



Delete?



Select and confirm the menu item. The entry is deleted.

continue:



Press the On-hook key to end the process.

Caller list

If you are unable to answer an external and/or internal call, this call request is stored in a caller list. If you belong to a hunt group or group call group, these call requests are also stored.

Your handset can store up to 10 calls in chronological order. Every call is given a timestamp. The display starts with the latest call request still not called. When several calls are received from one caller, the number of calls is shown.

During a call, you can save the other caller's phone number to your caller list.



Note:

If the service engineer has made the appropriate configuration, the phone numbers for all external answered calls are automatically saved.

Selecting a call request



Press the Talk key.



Call the system menu.




Caller list?

OK

Select and confirm the menu item. The first call request is displayed.



Select a call request.

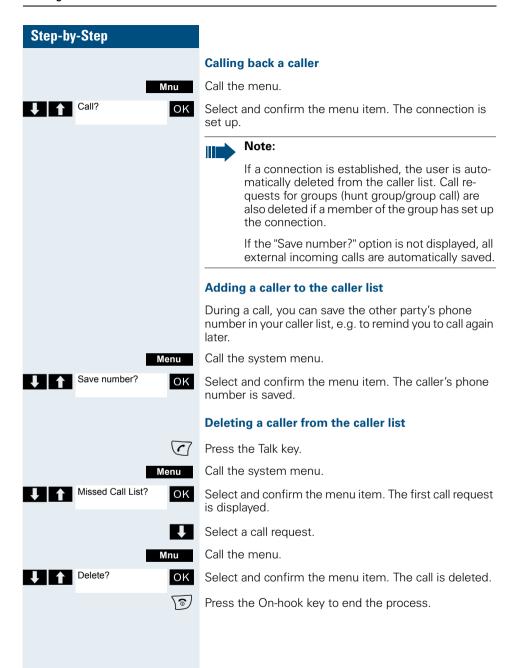

Additional functions

Handset alarm clock function

When the alarm clock is activated, it rings every day at the set time. The alarm clock is deactivated during automatic number redial



Note:

Please note the following:

- First set the date and time. This sets the internal clock of the handset.
- Do not switch off the handset after you have made the settings, otherwise the date and time will be reset. The alarm clock would otherwise relate to an incorrect time setting.
- Check the date and time and reset from time to time where applicable.

Activating the alarm clock

The handset is in idle status



















Alarm Clock



Select and confirm the menu item.











Move the cursor down one line.



Enter the time, e. g. 19:05 = 1905.

Save

Save the settings.



The alarm clock is activated.



Press and hold the On-hook key to end the process.



Deactivating the alarm clock

An appointment reminder call is signalled in the same way as an incoming call.




Press any key during an alarm call.

Deactivating the alarm clock

The handset is in idle status.



Open the menu.

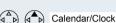









Select and confirm the menu item.



Select and confirm the menu item.





Fix the setting.



Save setting.



Press and hold the On-hook key to end the process.

Handset appointment reminder function

You can arrange for your handset to remind you of an appointment. Only one appointment can be set. The handset must be in idle status at the time of the appointment reminder. The appointment reminder function is deactivated during automatic number redial.



Note:

Please note the following:

- First set the date and time. This sets the internal clock of the handset.
- Do not switch off the handset after you have made the settings, otherwise the date and time will be reset. The appointment reminder function would otherwise be based on an incorrect time setting.
- Check the date and time and reset from time to time where applicable.

Activating the appointment reminder function

The handset is in idle status.



Open the menu.







Select and confirm the menu item.









Select and confirm the menu item.







Select and confirm the required appointment.







Fix the setting.



Move the cursor down one line.



Enter the date, e. g. 11 November = 1111.



Move the cursor down one line.



Enter the time, e. g. 19:05 = 1905.



Move the cursor down one line.





Specify the text.



Save the settings.



The appointment reminder function is activated.



Press and hold the On-hook key to end the process.



Confirming an appointment reminder call

An appointment reminder call is signalled in the same way as an incoming call.



Press any key during the appointment reminder call.

If you do not confirm the appointment reminder call, it will be stored in a missed dates list.

Deactivating the appointment reminder function

The handset is in idle status.

Open the menu.





Calendar/Clock



Select and confirm the menu item.







Select and confirm the menu item.







Fix the setting.



Save setting.



Press and hold the On-hook key to end the process.

Displaying an unconfirmed appointment

If you have failed to confirm an appointment reminder call, a Display key is assigned the "Missed Appoint." function. This unconfirmed appointment must also be saved in a missed dates list

Missed Appoint.

Display an appointment.



Open an appointment. The date and time of the unconfirmed appointment are displayed.

Displaying an unconfirmed appointment and unconfirmed anniversaries

Any appointment reminder calls and anniversary calls you fail to confirm are stored in a missed dates list.





















Select and confirm the menu item.









Select the unconfirmed appointment or an unconfirmed anniversary. The relevant information is displayed.



Press and hold the On-hook key to end the process.

System appointment function

You can use your handset to enter a single appointment for the next 24 hours or an appointment that recurs on a daily basis.

When the appointment is due, your handset rings for approx. 20 seconds to remind you of your appointment. The entered appointment appears on the display. This appointment call is deleted when you confirm it. Alternatively it is deleted automatically after it has been repeated 5 times at one minute intervals.

This function can also be called by entering the code (→ page 88).

Entering an appointment



Press the Talk key.

Menu

Call the system menu.



Service?



Select and confirm the menu item.



*46=Timed reminder



Select and confirm the menu item.

Remind at (HHMM):



Enter the required time.

Note the required data format: Appointment at (HH-MM); HH = two-digit hour setting mm = minutes, two digits For example: 0905 for 9.05 (= 9.05 a.m.) or 1430 for 14.30 (= 2.30 p.m).

either:



One time only?



or:

ΟK

Select a menu item.



Daily?

Select and confirm the menu item.

continue:



Save the settings.



Press the On-hook key to end the process.

Deleting/ checking entered appointments



Press the Talk key.




Call the system menu.



Service?



Select and confirm the menu item.

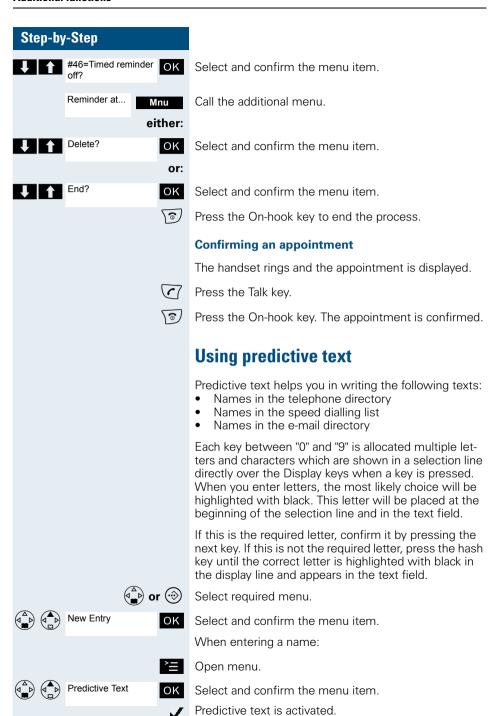



Press the On-hook key to return to the text field.



Enter text.



Press function key to select a character. Then press the next letter.



Open menu.







Save settings.



Press and hold the On-hook key to end the process.

Selecting a base

If your handset is registered at multiple bases, then you can set a specific base or the base with the best reception as the base to be used. The handset then switches automatically to this base.

You can change the base name that is displayed on the handset at any time (→ page 24).














OK





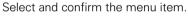






Select Base





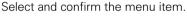





Base 1 Best Base



Select the required base and confirm. The selected base is ticked.



Press and hold the On-hook key to end the process.

Telephone blocking

Handset telephone lock

You can protect your handset against unauthorised access by entering a 4-digit numerical code to lock it.

The PIN is preset to "0000" (default). The handset does not prompt for a PIN in this setting. As soon as you have changed the PIN you will need to enter it when you turn on the handset.

Enter the value "0000" again to deactivate the PIN.



Attention:

If you have forgotten your PIN, please contact Siemens Service. The PIN will be reset at your own expense.

Entering a new PIN



Open the main menu of the handset.



Select and confirm the menu item.



Select and confirm the menu item.



Enter the old PIN.



Enter the new PIN.



Move the cursor down one line.



Repeat the new PIN.



Confirm your entry.



Press and hold the On-hook key to end the process.

Battery charging when PIN lock active

If you turn off the handset when the PIN lock is active and place it in the charging shell, the handset turns itself back on and prompts for the PIN.

However, incoming calls will not be answered due to the lock.





H/Set Settings





Change HSPIN

Telephone lock code programming

You can protect your handset against unauthorised access (thereby safeguarding personal data) by entering a 5-digit code to lock and unlock it.

To change a code, first enter the old code and then key in the new code twice.



Press the Talk key.

Menu

Call the system menu.



Service?



Select and confirm the menu item.



*Change PIN?



Select and confirm the menu item.



Enter the old PIN (5 digits, default "00000").



Enter the new PIN, e.g. 11111 (5 digits).



Repeat the new PIN.



Press the On-hook key to end the process.



Note:

If you have forgotten your PIN, contact your service engineer for help. He will be able to reset your PIN to "00000".

It is also possible to open your mobile phone from a central station, e.g. from the attendant terminal.

Locking/unlocking the handset

You can lock your handset to prevent external dialling and programming, thereby preventing unauthorised use in your absence, for example.

Prerequisite: You have defined a personal code or use the default code "00000".

Locking the handset



Press the Talk key.

Menu

Changeover on?



Call the system menu.



Select and confirm the menu item.



Enter the PIN code (5 digits, default "00000"). Press the On-hook key to end the process.



Note:

Even though it is locked, you can still use your handset to answer external calls and make internal calls. When an external connection is established, the following message appears on the display "Telephone Lock Active".

Your handset can also be locked from a central station (→ page 85).

Unlocking the handset



Press the Talk key.



Call the system menu.





Changeover off?

OK

Select and confirm the menu item.



Enter the PIN code (5 digits, default "00000").



Press the On-hook key to end the process.



Central telephone lock/locking/unlocking other handsets

If you have the appropriate authorisation, you can lock and unlock other handsets to prevent unauthorised use.

If the user has locked his handset and has forgotten the individual password he has set, you can unlock the phone again using this function.



Press the Talk key.

Menu

Call the system menu.



Service?

OK

Select and confirm the menu item.



More features?

OK

Select and confirm the menu item.



*943=Telephone OK

Select and confirm the menu item.



Enter a user's phone number.





Lock the handset. The following appears on the display: "Telephone locked".

or:



Unlock the handset. The following appears on the display: "Telephone unlocked".

System functions

The system functions can be called up via the menu or directly by entering codes.

Calling functions via the menu

(1)

Press the Talk key.

Menu

Call the system menu.

either:

Suppress call ID?

MNS?

Select and confirm the function.

oĸ or:

Service?

oĸ

Select and confirm the menu item.

*41=Temporary oĸ

Select and confirm the function.

or: OK

Service?

Select and confirm the menu item.

OK ок

Select and confirm the menu item.

#58=View callbacks?

More functions?

Select and confirm the function.

continue:

(&)

Press the On-hook key to end the process.

Calling functions via codes

(1)

Press the Talk key.

either:



Enter code according to table (\rightarrow page 89).

or:



Enter code according to table (\rightarrow page 89).

continue:



Press the On-hook key to end the process.

Functions and codes

Functions	Codes
Automatic call wait.term.on	₩△ 490
Automatic call wait.trm.off	# -• 490
Waiting tone off	★ △ 87
Waiting tone on	# -• 87
Call waiting	★ 4 55
Caller list	
- Call	# -• 82
- Save phone number	★ △ 82
Advisory msg. on	★ △ 69
Advisory msg. off	# -• 69
DND on	* △ 97
DND off	# -• 97
UCD:	
- Log on	* 401
- Log off	# -• 401
- Work on	* 403
- Work off	# -• 403
- Available	* 402
- Not available	# -• 402
- UCD night on	* 404
- UCD night off	# -° 404
- No. of calls	* 4 405
Override (authorised telephone only)	* 4 62
Call trace	★ △ 84
Messages	
- Send	* 4 68
- View sent message	# 68

Functions	Codes
Conference:	
- On	* \$\text{\(3 \)}
- Off	# -• 3
Call Charge Display	* 4 65
Use speed dialing	* 7
Change Speed Dial	★ 4 92
Toggle	*4 2
Tone dialling	★ 4 53
Night Service ON	*4 44
Night Service OFF	# 44
Park	
- Park call	₩4 56
- Retrieve call	# -> 56
Account code	* \$\triangle 60
Callback	* 4 58
View callbacks	# -9 58
Suppress phone number	₩4 86
Temporary phone number (MSN)	* 41
Restore phone number	# -9 86
Ringing group on	* 4 81
Hunt group on	* 4 85
Hunt group off	# -9 85
Control Relay On	₩4 90
Control Relay Off	# -9 90
Change PIN	* 4 93
Recall to Network (flash)	* 51
Changeover on	* 66
Changeover off	# 66
Tel. data service	* 42

Functions	Codes
Timed reminder on	(* ♠ 46
Timed reminder off	# -• 46
Door release ON	* \$9
Door release OFF	# -• 89
Door opener	* 61
Pickup group	* 57
Pickup, directed	* 59
Forwarding on	* 1
Forwarding off	# -• 1
Trunk FWD on	* 64
Trunk FWD off	#- 9 64
Telephone Lock	* 943
Return to held call	* \$\triangle 0

Appendix

Troubleshooting

Some malfunctions can be resolved without outside intervention. The following table provides a list of such malfunctions.

Error	Possible cause	Remedy
No display.	Handset not switched on.	Press the On-hook key until confirmation is received.
	Battery is empty.	Charge or replace the battery.
No reaction to keystroke.	Keypad lock activated.	Press the hash key until confirmation is received.
De-crescendo tone sequence during input.	An incorrect entry was made.	Repeat key sequence while watching the dis- play; where applicable, consult the operating instructions.
The line "Base n" flashes (n= 1 - 4).	The handset is outside the base radio range; Radio signals too weak.	Come closer to the base radio range, change your position.
	Handset not regis- tered.	Register the handset.
	Intervals between synchronisation attempts are too long.	Switch off the handset and switch it back on again.
No ringer on the hand- set.	Ringer is deactivated.	Activate ringer.
Nothing audible during a call.	The "R key" was pressed – the micro- phone and the receiver inset are muted.	Press the "Delete" Display key to re-activate the microphone and the receiver inset.
The following appears immediately after the Talk key is pressed:	Communication system is being used by other users.	Repeat call later.
Connect.		
No dial tone available; No calls can be made.		

Error	Possible cause	Remedy
The following, for example, appears:	Handset is blocked.	Remove the battery from the handset and
Base 1 Outgoing and incoming calls and activation/deactivation are not possible.		then re-insert it. Procede as when loading batteries for first time. (→ page 14).

Cleaning the handset

To clean the handset and the charging shell, simply wipe them with a damp or antistatic cloth. Never use a dry cloth.

Do not use abrasive cleaning agents.

Technical data

Communication system

Standards DECT in accordance with ETSI TBR 6/10/22

Number of channels 120 duplex channels Radio frequency range 1.88 GHz to 1.90 GHz

Time duplex with a 10 ms frame length each Duplex operation

Channel configuration 1728 kHz Bit rate 1152 kbit/s **GFSK** Modulation

Voice encoding 32 kbit/s (ADPCM) Outdoors approx. 300 m Range Indoors approx. 50 m

Handsets

EU guidelines 89/336/EC "Electromagnetic Compatibility"

73/23/EC "Electrical apparatus for use within specific voltage parameters"

Maximum noise level according to TBR10, An-

nex D

Operating times with fully charged battery

→ page 15

118 dB (A)

Permitted environmen- +5 °C to +45 °C

tal conditions for opera- 20 % to 75 % relative humidity

tion

Weight incl. batteries approx. 148 g

Dimensions approx. 146 x 55 x 27 mm

 $(L \times W \times H)$

Accessories

Charging shell

The charging shell is used for charging the battery and storing the handset safely.

Power supply unit

The power supply unit is used to power the charging shell. Only use the permitted C39280-Z4-C373 power supply unit (in the United Kingdom: C39280-Z4-C478).

Declaration of conformity

Your handset is supplied for use within a specific country, which is displayed on the underside of the device. Country-specific features must be observed.

The device complies with the basic requirements of the R&TTE Directive and therefore displays the CE symbol.

Extract from original declaration

"We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETE-COM ICT Services GmbH with the registration number "Q810820M" in compliance with ANNEX V of the R&TTE-Directive 99/05/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/05/EC is ensured."

Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. In case of need, a copy of the original DoC can be made available via the company hotline.



Index

Accessories 94 Call waiting 51 Activating 2 Automatic ~ 53 Advisory message 70 Call waiting tone off/on 52 Advisory tones 20 Callback 3 Anniversary function 34 Callback key 10 Answering a message 73 Callback key 10 Answering calls 40 Caller list 75 Answering calls 40 Making 2, 3 Answering voice mail 73 Making 2, 3 Appointment 80 Capacity 15 Confirming 82 Rejecting 6 Confirming 81 Capacity 15 Attachment clip 1 Carrier list 34 Attonasver 23 Capacity 15 Auto Answer 23 Charging status 14 Auto Answer 23 Charging time 15 Charging time 15 Checking appointments 81	A	Call trace42
Activating 2 Automatic ~ 53 Advisory message 70 Call waiting tone off/on 52 Advisory tones 20 Callback 3 Anniversary function 34 Callback key 10 Anniversary function 34 Caller list 75 Answering a message 73 Caller list 75 Answering voice mail 73 Appointment 40 Answering voice mail 73 Making 2,3 Appointment 82 Rejecting 6 Confirming 82 Rejecting 6 Collete 81 Capacity 15 Attachment clip 1 Carrier list 34 Auto. Answer 23 Charge status 14 Auto. Answer 23 Charging shell 94 Automatic call waiting 53 Charging shell 94 Charging shell 94 Charging time 15 Checking appointments 81 Checking appointment		Call waiting51
Advisory message 70 Advisory tones 20 Anniversary function 34 Annoymous calling 39 Answering a message 73 Answering calls 40 Answering voice mail 73 Appointment 73 Confirming 82 Delete 81 Attachment clip 1 Fitting 16 Charging status 14 Auto. Answer 23 Automatic call waiting 53 Automatic call waiting 53 Charging shell 94 Charging shell 94 Charging time 15 Checking appointments 81 Cleaning 93 Code programming 85 Capacity 15 Charging time 15 Charging appointments 81 Cleaning 93 Code programming 85 Copacity 15 Conference <td< td=""><td></td><td>Automatic ~53</td></td<>		Automatic ~53
Advisory tones 20 Anniversary function 34 Answering a message 73 Answering calls 40 Answering voice mail 73 Appointment 20 Delete 81 Attachment clip 1 1 Fitting 16 Auto. Answer 23 Automatic call waiting 53 Automatic call waiting 53 Batteries Capacity 15 Capacity 15 Checking appointments 15 Checking appointments 81 Cleaning 93 Code programming 85 Batteries Code table 89 Capacity 15 Conference 57 Charging time 15 Charging time 15 Conpartment cover 1 1 Ending 58 Inserting 15 Operating time 15 Disconnecting 58 Nermitted ~ 15 Standby mode 15 Talk time 15 Standby mode 15 Talk time 25 Set 20 Call answering group 77 Call charges 41 Deactivating 23 Call bravase 91 Call charges 41 Deactivating 23 Call bravase 91 Call charges 41 Deactivating 23 Call forwarding 7 Default state 25	8	
Anniversary function 34 Callback key 10 Anonymous calling 39 Answering a message 73 Answering voice mail 73 Appointment Confirming 82 Delete 81 Capacity 16 Auto. Answer 23 Auto. Answer 23 Automatic call waiting 53 Batteries Capacity 15 Charging time 15 Standby mode 15 Standby mode 15 Set 20 Call chirch sale for the working parties 58 Battery tone Function 25 Call canning 53 Calls 75 Call charse 40 Making 2, 3 Picking up 77 Rejecting 6 Capacity 16 Carrier list 34 Capacity 15 Carrier list 34 Capacity 15 Charging time 15 Checking appointments 81 Cleaning 93 Code programming 85 Code programming 85 Code table 88 Capacity 15 Conference 57 Charging 14 Connecting parties 59 Disconnecting 59 Conference 15 Setting up 57 Standby mode 15 Viewing 58 Setting up 57 Standby mode 15 Confirmation tone 75 Set 20 Connection quality 25 Control key 1, 11 C Call charge display 41 Date, setting 23 Call forwarding 7 Default state 25		
Anonymous calling 39 Caller list		
Answering a message 73 Answering calls 40 Answering voice mail 73 Appointment 73 Appointment 74 Confirming 82 Attachment 83 Auto. Answer 83 Auto. Answer 83 Automatic call waiting 83 B B B B Capacity 15 Checking appointments 81 Cleaning 93 Cade programming 85 Batteries Code table 89 Capacity 15 Conference 57 Charging time 15 Charging time 59 Charging time 59 Charging time 59 Charging time 59 Charging 14 Connecting parties 59 Compartment cover 1 Ending 58 Inserting 13 Calls Directed transfer 40 Making 2, 3 Making 2, 3 Making 2, 3 Picking up 7 Rejecting 94 Capacity 15 Charge Ists 34 Charge Ists 34 Charging shell 94 Charging time 15 Checking appointments 81 Cleaning 93 Code programming 85 Code table 89 Code programming 59 Compartment cover 1 Ending 59 Inserting 15 Inserting 59 Compartment cover 1 Ending 58 Inserting 58 Coperating time 15 Is Setting up 58 Standby mode 15 Viewing 58 Talk time 55 Standby mode 15 Viewing 58 Start 20 Function 25 Set 20 Connecting parties 59 Set 20 Connecting parties 59 Set 20 Connecting parties 59 Confirmation tone 75 Function 25 Set 20 Connecting parties 59 Connecting parties 59 Control key 1, 11 Control relay 45 Call answering 66 Call answering 66 Call answering 70 Call charge display 41 Date, setting 23 Call forwarding 70 Default state 25		· ·
Answering calls	,	
Answering voice mail 73 Appointment 73 Appointment 82 Confirming 82 Delete 81 Carrier list 34 Attachment clip 16 Auto. Answer 23 Automatic call waiting 53 Batteries Capacity 55 Capacity		Directed transfer 40
Appointment Confirming Delete Delete Set Delete Set Set Set Set Set Set Set Set Set		
Rejecting		,
Delete 81 Capacity 15 Attachment clip I Carrier list 34 Fitting 16 Charge status 14 Auto. Answer 23 Charging shell 94 Automatic call waiting 53 Charging shell 94 Charging shell 94 Charging shell 94 Charging shell 94 Charging shell 94 Charging shell 94 Charging time 15 Cleaning 93 Checking appointments 81 Cleaning 93 Code table 89 Code table 89 Code table 89 Code table 89 Connecting parties 59 Compartment cover 1 Ending 58 Inserting 13 Expanding <td< td=""><td>···</td><td></td></td<>	···	
Attachment clip I Carrier list 34 Fitting 16 Charge status 14 Auto. Answer 23 Charging shell 94 Automatic call waiting 53 Charging shell 94 Automatic call waiting 53 Charging time 15 Chacking appointments 81 Cleaning 93 BB Code table 89 Capacity 15 Conference 57 Charging time 15 Conference 57 Charging time 15 Disconnecting parties 59 Compartment cover 1 Ending 58 Inserting 13 Expanding 58 Inserting 13 Expanding 58 Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Set 20 <td>9</td> <td></td>	9	
Attachment clip		
Auto. Answer 23 Charging shell 94 Automatic call waiting 53 Charging time 15 Checking appointments 81 Cleaning 93 B Code programming 85 Batteries Code table 89 Capacity 15 Conference 57 Charging time 15 Connecting parties 59 Charging time 15 Disconnecting 59 Compartment cover 1 Ending 58 Inserting 13 Expanding 58 Inserting 13 Expanding 58 Operating time 15 Leaving 58 Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone 5et 20 Function 25 Connecting parties 59 Set 20 Connecting parties 59 <t< td=""><td>·</td><td></td></t<>	·	
Automatic call waiting 53 Charging time 15 Checking appointments 81 Cleaning 93 Code programming 85 Code table 89 Capacity 15 Conference 57 Charging 14 Connecting parties 59 Compartment cover 1 Ending 58 Inserting 13 Expanding 58 Cograting time 15 Leaving 58 Operating time 15 Leaving 58 Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Set 20 Connecting parties 59 Set 20 Connecting parties 59 Connecting 15 Confirmation tone 25 Connecting 26 Set 20 Connecting parties 59 Connecting time 25 Connecting parties 25 Control key 1, 11 Control relay 45 Call answering group 7 Call charge display 41 Date, setting 22 Call charges 41 Deactivating 22 Call forwarding 7 Default state 25	•	
Checking appointments		
B Cleaning 93 Batteries Code programming 85 Capacity 15 Conference 57 Charging 14 Connecting parties 59 Charging time 15 Disconnecting 59 Compartment cover I Ending 58 Inserting 13 Expanding 58 Inserting 13 Expanding 58 Operating time 15 Leaving 58 Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connecting parties 59 Set 20 Connecting parties 59 Control key 1, 11 Control key 1, 11 Control relay	Automatic call waiting53	
B Code programming 85 Batteries Code table 89 Capacity 15 Conference 57 Charging 14 Connecting parties 59 Charging time 15 Disconnecting 59 Compartment cover 1 Ending 58 Inserting 13 Expanding 58 Inserting 13 Expanding 58 Operating time 15 Leaving 58 Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connecting parties 59 Set 20 Connecting parties 59 Control key 1, 11 Control key 1, 11 Control rel		
Batteries Code table 89 Capacity 15 Conference 57 Charging 14 Connecting parties 59 Charging time 15 Disconnecting 59 Compartment cover 1 Ending 58 Inserting 13 Expanding 58 Operating time 15 Leaving 58 Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connecting quality 2 Control key 1, 11 Control relay 45 Call answering 6 Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 <td>R</td> <td></td>	R	
Capacity 15 Conference 57 Charging 14 Connecting parties 59 Charging time 15 Disconnecting 59 Compartment cover I Ending 58 Inserting 13 Expanding 58 Operating time 15 Leaving 58 Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connecting parties 59 Set 20 Control key I, 11 C Control relay 45 Call answering 6 Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25	_	
Charging 14 Connecting parties 59 Charging time 15 Disconnecting 59 Compartment cover I Ending 58 Inserting 13 Expanding 58 Operating time 15 Leaving 58 Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connection quality 2 Control key I, 11 Control relay 45 Call answering 6 Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25		
Charging time 15 Disconnecting 59 Compartment cover I Ending 58 Inserting 13 Expanding 58 Operating time 15 Leaving 58 Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connection quality 2 Control key I, 11 Control relay 45 Call answering 6 Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25		
Compartment cover I Ending 58 Inserting 13 Expanding 58 Operating time 15 Leaving 58 Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connection quality 2 Control key I, 11 Control relay 45 Call answering 6 Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25		• • • • • • • • • • • • • • • • • • • •
Inserting 13 Expanding 58 Operating time 15 Leaving 58 Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connection quality 2 Control key I, 11 Control relay 45 Call answering 6 Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25		
Operating time 15 Leaving 58 Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connection quality 2 Control key I, 11 Control relay 45 Call answering 6 Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25		
Permitted ~ 15 Setting up 57 Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connection quality 2 Control key I, 11 Control relay 45 Call answering 6 Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25	•	
Standby mode 15 Viewing 58 Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connection quality 2 Control key I, 11 Control relay 45 Call answering 6 Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25	· · · · · · · · · · · · · · · · · · ·	•
Talk time 15 Confirmation tone Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connection quality 2 Control key I, 11 Control relay 45 Call answering 6 Call answering group 7 D Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25		
Warning tone 25 Function 25 Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connection quality 2 Control key I, 11 Control relay 45 Call answering 6 Call answering group 7 D Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25	,	_
Battery tone Set 20 Function 25 Connecting parties 59 Set 20 Connection quality 2 Control key I, 11 Control relay 45 Call answering 6 Call answering group 7 D Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25		
Function 25 Connecting parties 59 Set 20 Connection quality 2 Control key I, 11 Control relay 45 Call answering 6 Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25	S .	
Set 20 Connection quality 2 Control key I, 11 Control relay 45 Call answering 6 Call answering group 7 Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25		
Control key I, 11 Control relay 45 Call answering 6 Call answering group 7 D Call charge display 41 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25		9.
Call answering 6 Call answering group 7 Call charge display 41 Call charges 41 Call forwarding 7 Date, setting 23 Call forwarding 7 Default state 25	Set20	· · ·
Call answering 6 Call answering group 7 Call charge display 41 Call charges 41 Call forwarding 7 Date, setting 23 Call charges 41 Deactivating 2 Call forwarding 7 Default state 25		,
Call answering group7DCall charge display41Date, setting23Call charges41Deactivating2Call forwarding7Default state25	C	Control relay45
Call answering group7DCall charge display41Date, setting23Call charges41Deactivating2Call forwarding7Default state25		
Call charge display41Date, setting23Call charges41Deactivating2Call forwarding7Default state25		D
Call charges41Deactivating2Call forwarding7Default state25		Date, setting23
Call forwarding		-
	o contract of the contract of	
Call pickup group7		

Index

Set	Dialling	Interference with electronic equipment
Preparation	After line seizure2	EMC
Directed answering of calls 40 Directed assignment of an MSN 37 Directed transfer of calls 40 Display 1 Display keys 12 Don or disturb 41 Door release 44 Activating 44 Deactivating 44 E Control key E-mail directory 36 Enquiry (second line) 5 Entering codes 88 Entrance telephone 43 External call forwarding 46 F Mailbox function Functions and codes 89 Function keys 10 Function keys 10 Function keys 10 Making calls 2,3 Locking/unlocking call 4 Message functions 70 MSN 37, 46 Mulap group Activating call forwarding 68 Forwarding a line 68 Locking/unlocking other phones 87 H	Before line seizure3	
Directed answignment of an MSN 37		V
Function		
Set		
Note	Directed transfer of calls40	_
Note	Display	
Control key		
Display keys	Do not disturb41	,
L	Door release	,
L		
E-mail directory	Deactivating44	Function keys10
E-mail directory	E	L
Enquiry (second line) 5 Entering codes 88 Entrance telephone 43 External call forwarding 46 W M Function keys 10 Functions and codes 89 Functions and codes 89 G Mailbox function Group call Message functions Activating/deactivating 61 Group functions 61 H Handset Locking/unlocking other phones 86 Locking/unlocking other phones 87 Handset telephone directory 34 Handset volume 18 Hash key 1, 10 Hunt group 61 Ilite 3, 30 Manual 3 Transferring a phone number 31		Leaving a message70
Line seizure		Leaving the radio network/re-registering .9
Locking/unlocking the telephone 43		Line seizure2, 3
Mailbox function		Locking/unlocking the telephone86
Mailbox function	External call forwarding46	
Function keys		M
Message functions 70	F	Mailbox function70
Message functions	Function keys 10	Making calls2, 3
Message list		Message functions70
Group call Microphone MSN 37, 46 Activating/deactivating 61 Mulap group Group functions 61 Activating call forwarding 68 Deactivating call forwarding 69 Deactivating group calls 68 Locking/unlocking 86 Multiple subscriber number 37, 46 Handset operating times 15 N Handset telephone directory 34 NET key 10 Handset volume 18 Night service 48 Hash key 1, 10 Number redial 30 Hunt group 61 Deleting an entry 31, 36 List 3, 30 Manual 3 Transferring a phone number 31 Identification code 38 Idle display, editing 24	Turiotione and oddor	Message listI, 10
Group call MSN 37, 46 Activating/deactivating 61 Mulap group Group functions 61 Activating call forwarding 68 Deactivating call forwarding 69 Deactivating group calls 68 Deactivating/activating group calls 68 Forwarding a line 68 Locking/unlocking 86 Multiple subscriber number 37, 46 N NET key 10 Handset volume 18 NET key 10 Hash key 1, 10 Number redial 30 Hunt group 61 Deleting an entry 31, 36 List 3, 30 Manual 3 Transferring a phone number 31 Identification code 38 Idle display, editing 24		Messages70, 71
Activating/deactivating 61 Mulap group Group functions 61 Activating call forwarding 68 Deactivating activating group calls 68 Deactivating a line 68 Forwarding a line 68 Multiple subscriber number 37, 46 N NET key 10 Handset operating times 15 NET key 10 Handset volume 18 Night service 48 Hash key 1, 10 Number redial 30 Hunt group 61 Deleting an entry 31, 36 List 3, 30 Manual 3 Transferring a phone number 31 Identification code 38 Idle display, editing 24	G	Microphone
Activating call forwarding	Group call	MSN37, 46
Deactivating call forwarding 69	Activating/deactivating61	Mulap group
Deactivating activating group calls 68 Forwarding a line 68 Forwarding a line 37, 46	Group functions61	Activating call forwarding68
Forwarding a line 68 Handset		
Handset Locking/unlocking	u	Deactivating/ activating group calls 68
Locking/unlocking		Forwarding a line68
Locking/unlocking other phones 87 Handset operating times 15 Handset telephone directory 34 Handset volume 18 Hash key 1, 10 Hunt group 61 Deleting an entry 31, 36 List 3, 30 Manual 3 Transferring a phone number 31 Identification code 38 Idle display, editing 24		Multiple subscriber number37, 46
Handset operating times 15 Handset telephone directory 34 NET key 10 Handset volume 18 Night service 48 Hash key 1, 10 Number redial 30 Hunt group 61 Deleting an entry 31, 36 List 3, 30 Manual 3 Transferring a phone number 31 Identification code 38 Idle display, editing 24		
Handset telephone directory		N
Handset volume 18 Night service 48 Hash key 1, 10 Number redial 30 Hunt group 61 Deleting an entry 31, 36 List 3, 30 Manual 3 Transferring a phone number 31 Idle display, editing 24		
Hash key I, 10 Number redial 30 Hunt group 61 Deleting an entry 31, 36 List 3, 30 Manual 3 Transferring a phone number 31 Idle display, editing 24		,
Deleting an entry		_
List	•	
Manual	Turit group61	
Transferring a phone number31 Identification code38 Idle display, editing24		
Identification code38 Idle display, editing24	1	
Idle display, editing24	Identification code 38	Transferring a priorie number31
	Individual system speed dialling32	

0	Speakerphone key, 1	0
On hold56	Speakerphone mode2	
On/off key	Speed dialling32, 3	4
On-hook key	Speed dialling key	. I
Opening/closing battery compartment 13	Standby mode1	5
Override53	Star keyI, 1	
	Suppress phone number3	9
D.	System speed dialling3	
P	System telephone directory3	3
Parking50		
Parts of the device	T	
Permitted batteries15	Talk keyl, 1	Λ
Picking up a call7	Talk time	
Placing a call on hold56	TDS telephone data service4	
Power supply unit94	Technical data9	
Project code	Telephone blocking8	
Protective cover13	Telephone conference5	
	Telephone lock85, 8	
R	Temporary phone3	
R keyl, 10, 11	Time control1	
Radio range2	Time, setting2	
Range93	Toggling5	
Range problems2	Tone dialling4	
Recall50, 55	Tones18, 2	0
Receiver inset	Transfer5	4
Reject call6	Troubleshooting9	12
Rejecting a call6		
Reset25	U	
Ringer echo21		
Ringer loudspeakerI	UCD night service	
Ringing 18	Universal call distribution6	4
Ringing group on63		
	V	
S	Voice dialling2	8.
Second call60		
Second line	W	
Second line (enquiry)5	••	_
Selecting a base83	Warning tone22, 5	
Sending a signal to the network	Wrap-up time6	b
Service codes89		
Setting the language23		
Handset16		
System17		
Setting the ringer18		
Sound setting functions18		

www.hipath.de



This device has been manufactured in accordance with our certified environmental management system (ISO 14001). This process minimises energy consumption, the use of primary raw materials and waste production.

© Siemens AG 2003 Information and Communication Networks Hofmannstr. 51 • D-81359 München

Order no.: A31003-G1531-B800-1-7619

The information in this document contains only general descriptions and features that may not always apply as described in specific cases or that may change as a result of the further development of the products. The required features are only binding if they are expressly agreed when the contract is signed.

Subject to availability and technical changes. Printed in Federal Republic of Germany 28.05.2003